


Conventions of the display representation

- If there are **no** dots between the digits, a **value** is displayed.
- If there are **are** dots between the digits, a **parameter number** is displayed.

1. Press the **P** key and turn power on


2. Press key **>>** (1st digit blinks)

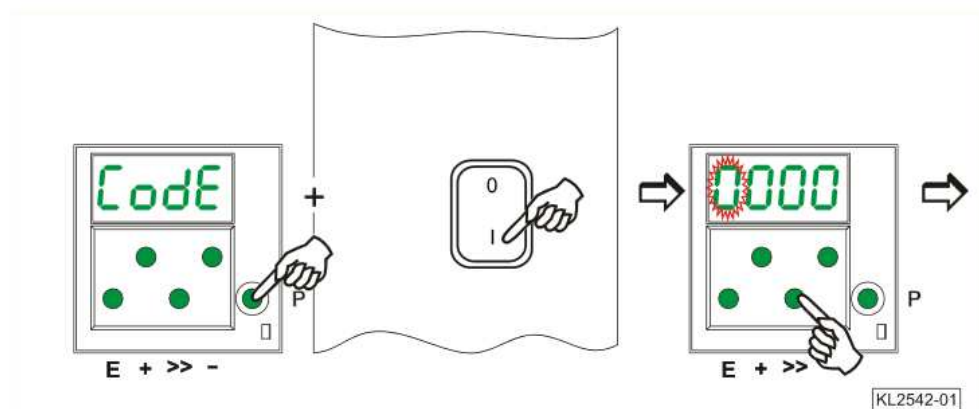

3. Press key **+/-** to select the 1st digit
Technician level → Code no. 1907
Supplier level → Code no. 3112

4. Press key **>>** (2nd digit blinks)


5. Press key **+/-** to select the 2nd digit

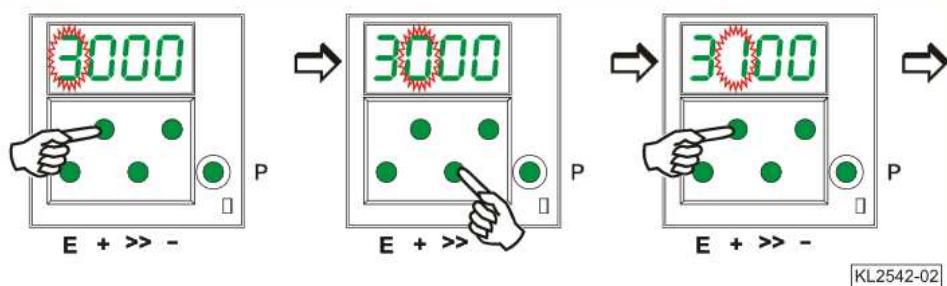

6. Press key **>>** (3rd digit blinks)

7. Press key **+/-** to select the 3rd digit

8. Press key **>>** (4th digit blinks)

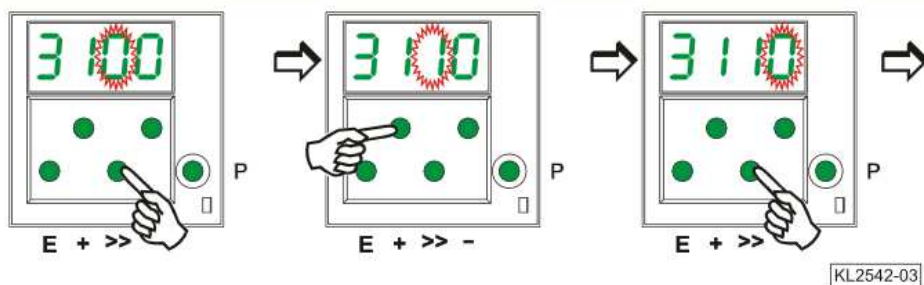

9. Press key **+/-** to select the 4th digit

10. Press the **E** key. The **parameter number** is displayed.

