


# **EFKA** euramot

**CONTROL**

**AB62CV1466**

**Ab62CV1469**

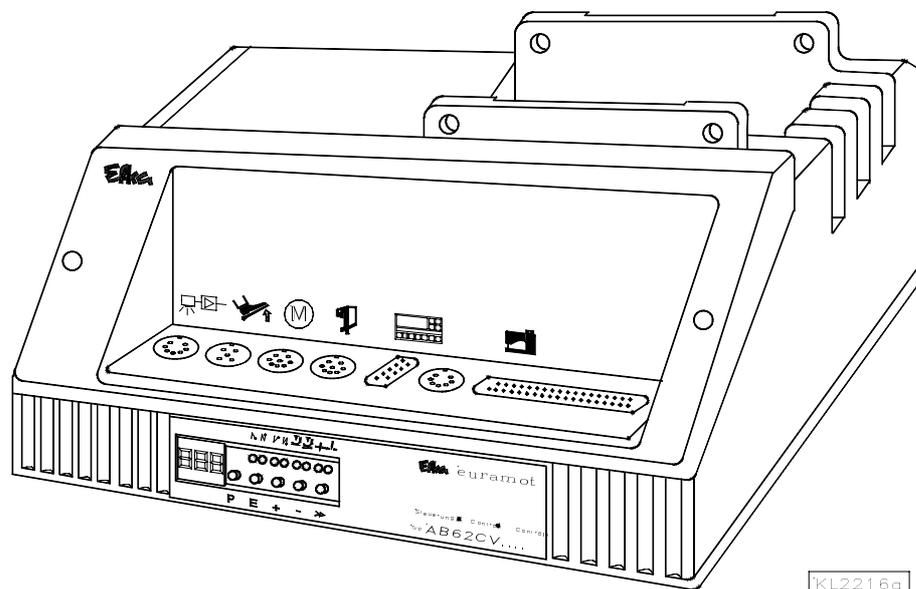

## **INSTRUCTION MANUAL**

**No. 402306**

**English**

---

**EFKA**  
FRANKL & KIRCHNER  
GMBH & CO KG

**EFKA**  
EFKA OF AMERICA INC.

**EFKA**  
EFKA ELECTRONIC MOTORS  
SINGAPORE PTE. LTD.

---

<b>CONTENTS</b>	<b>Page</b>
<b>1 Important Safety Instructions</b>	<b>7</b>
<b>2 Range of Applications</b>	<b>8</b>
2.1 Use in Accordance with Regulations	9
<b>3 Scope of Supply</b>	<b>9</b>
3.1 Special Accessories	9
<b>4 Connection Scheme of SM210A Stepping Motor Control</b>	<b>11</b>
<b>5 Control Operation without Control Panel</b>	<b>12</b>
5.1 Access Authorization upon Command Input	12
5.2 Programming the Code Number	13
5.3 Parameter Selection	14
5.3.1 Direct Selection	14
5.3.2 Changing Parameter Values	15
5.3.3 Parameter Selection with the +/- Keys	16
5.4 Changing All Parameter Values at the Operator Level	17
5.5 Function Switchover	17
5.6 Direct Input of Maximum Speed Limitation without Control Panel	17
5.7 Program Identification on the Control	18
<b>6 Control Operation with Control Panel</b>	<b>19</b>
6.1 Operation of the V810 Control Panel	19
6.1.1 Code Number Input on the V810 Control Panel	19
6.1.2 Parameter Input at the Operator Level on the V810 Control Panel	19
6.1.3 Parameter Input at the Technician/Supplier Level on the V810 Control Panel	20
6.2 V820 Control Panel Operation	20
6.2.1 Code Number Input on the V820 Control Panel	20
6.2.2 Parameter Input at the Operator Level on the V820 Control Panel	21
6.2.3 Parameter Input at the Technician/Supplier Level on the V820 Control Panel	21
6.3 Program Identification	22
6.4 Direct Input of Maximum Speed Limitation (DED) with Control Panel	22
6.4.1 Setting on the V810 Control Panel	22
6.4.2 Setting on the V820 Control Panel	22
6.5 Keys for Background Information (HIT) with V820	23
6.5.1 Example of HIT	23
6.6 Programming of Seams(TEACH IN)	25
6.6.1 Teach-in Mode	26
6.6.2 Seam with Stitch Counting	26
6.6.3 Backward Seam with Stitch Counting	26
6.6.4 Stitch Counting and/or Light Barrier	26
6.6.5 Detailed Example	27
6.6.6 Maximum Number of Seams Exceeded	28
6.6.7 Execution (Pattern) Mode	29
<b>7 Putting into Service</b>	<b>30</b>
<b>8 Setting the Basic Functions</b>	<b>30</b>
8.1 Direction of Motor Rotation	30
8.2 Selection of Functional Sequences (Thread Trimming Operations)	30
8.3 Functions of the Keys Inputs in1...i10	35
8.4 Positioning Speed	35
8.5 Maximum Speed Compatible with the Sewing Machine	35
8.6 Maximum Speed	35
8.7 Positions	36

<b>CONTENTS</b>	<b>Page</b>
8.8 Display of the Signal and Stop Positions	36
8.9 Braking Characteristics	37
8.10 Braking Power at Standstill	37
8.11 Starting Characteristics	38
8.12 Actual Speed Display	38
8.13 Supply Voltage 5V or 15V	38
<b>9 Functions with or without Control Panel</b>	<b>39</b>
9.1 First Stitch after Power On	39
9.2 Softstart	39
9.2.1 Softstart Speed	39
9.2.2 Softstart Stitches	39
9.3 Sewing Foot Lifting	39
9.4 Start Backtack/Start Stitch Condensing	41
9.4.1 Speed n3 at the Start of the Seam	41
9.4.2 Stitch Counting for Start Backtack/Start Stitch Condensing	42
9.4.3 Stitch Correction and Speed Release	42
9.4.4 Double Start Backtack	42
9.4.5 Single Start Backtack / Start Stitch Condensing	42
9.5 End Backtack / End Stitch Condensing	42
9.5.1 Speed n4 at the Seam End	43
9.5.2 Stitch Counting for End Backtack/End Stitch Condensing	43
9.5.3 Stitch Correction and Last Stitch Backward	43
9.5.4 Double End Backtack/End Stitch Condensing	43
9.5.5 Single End Backtack / End Stitch Condensing	44
9.5.6 Backtack Synchronization	44
9.6 Start Ornamental Backtack/Stitch Condensing	44
9.7 End Ornamental Backtack/Stitch Condensing	44
9.8 Intermediate Backtack	45
9.9 Stitch Regulator Suppression/Recall	45
9.10 Holding Power of the Stitch Regulator Solenoid	45
9.11 Reverse Motor Rotation	46
9.12 Unlocking the Chain (Mode 4/5/6/7/16)	46
9.13 Machine Run Blockage (Safety Switch)	47
9.14 High Lift for Walking Foot Signal Output M6 / Flip-Flop 1	48
9.14.1 High Lift Walking Speed	48
9.14.2 High Lift Walking Speed Run-Out Time	48
9.14.3 High Lift Walking Stitches	49
9.14.4 High Lift for Walking Foot Operational Mode Not Stored (Parameters 240...249 = 13)	49
9.14.5 High Lift for Walking Foot Operational Mode Stored /Flip-Flop 1 (Parameters 240...249 = 14)	49
9.15 Speed Limitation n9	49
9.16 Speed Limitation n11 with Signal Output M10 / Flip-Flop 2	50
9.17 Disabling of Flip-Flop Functions at the Seam End	50
9.18 Bobbin Thread Monitor (Only with Program 1466)	50
9.19 Thread Trimming Operation	51
9.19.1 Thread Trimmer/Thread Wiper (Modes 0, 1, 2, 3, 10, 13, 14, 19, 20 and 22)	51
9.19.2 Trimming Speed	51
9.19.3 Chainstitch Thread Trimmer (Modes 4, 5, 6, 17 and 21)	52
9.19.4 Chainstitch Machine Trimming Signal Times	52
9.20 Stitch Lock Machine Functions (Mode 21)	52
9.21 Overlock Machine Functions (Mode 7)	52
9.21.1 Chain Suction Signal	52
9.21.2 Start and End Counts	53
9.22 Function of Output Signal M8	53
9.23 Function of Output Signal M11	54

<b>CONTENTS</b>	<b>Page</b>
9.24 Tape Cutter/Fast Scissors (Modes 6/7/16)	54
9.24.1 Functions for Mode 6	54
9.24.2 Functions for Mode 7	54
9.24.3 Functions for Mode 16	55
9.25 Manual Tape Cutter/Fast Scissors	56
9.26 Seam with Stitch Counting	57
9.26.1 Stitches for Stitch Counting	57
9.26.2 Stitch Counting Speed	57
9.26.3 Seam with Stitch Counting When Light Barrier Is On	57
9.27 Free Seam and Seam with Light Barrier	58
9.28 Light Barrier	58
9.28.1 Speed after Light Barrier Sensing	58
9.28.2 General Light Barrier Functions	58
9.28.3 Reflection Light Barrier LSM001A	59
9.28.4 Light Barrier Monitoring	59
9.28.5 Automatic Start Controlled by Light Barrier	59
9.28.6 Light Barrier Filter for Knitted Fabrics	60
9.28.7 Functional Variations of the Light Barrier Input	60
9.29 Switching Functions of Inputs in1...i10	60
9.30 Software Debouncing of All Inputs (Only< with Program 1466)	61
9.31 F1/F2 Function Key Assignment on the V810/V820 Control Panels	62
9.32 Speed Limitation by means of External Potentiometer	62
9.33 Signal "Machine Running"	63
9.34 Function "Error Message A1" On/Off	63
9.35 Signal Output Position 1	63
9.36 Signal Output Position 2	63
9.37 Signal Output 120 Impulses per Rotation	63
9.38 Actuator	64
9.39 Acoustic Signal	65
9.40 Master Reset	65
<b>10 Signal Test</b>	<b>66</b>
10.1 Signal Test Using the Incorporated Control Panel or the V810/V820	66
<b>11 Error Displays</b>	<b>67</b>
<b>12 Operating Elements of the V810 Control Panel</b>	<b>68</b>
<b>13 Operating Elements of the V820 Control Panel</b>	<b>69</b>

# 1 Important Safety Instructions

When using an EFKA drive and accompanying devices (e.g. for sewing machines), basic safety precautions should always be followed, including the following:

- Read all instructions thoroughly before using this drive.
- Drive, its accessories and accompanying devices should be mounted and put into operation by qualified personnel in accordance with the guidelines provided in the instruction manual.

## To reduce the risk of burns, fire, electric shock, or personal injury:

- Use this drive only for its intended use as described in the instruction manual.
- Use only attachments recommended by the manufacturer or as contained in the instruction manual.
- Do not operate without corresponding protective devices.
- Never operate this drive if one or more parts (e.g. cables, plugs) are damaged, if it is not working properly, if any damages can be identified or are to be suspected (e.g. after it has been dropped). Only qualified personnel are authorized to make adjustments, eliminate faults and complete repair work.
- Never operate the drive with the air openings blocked. Keep ventilation openings of the drive free from the accumulation of lint, dust and loose cloth.
- Never drop or insert any object into any opening.
- Do not use drive outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- To disconnect, turn off main switch, then remove plug from outlet.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Keep fingers away from all moving machine parts. Special care is required e.g. around the sewing machine needle and the V-belt.
- Before mounting and adjusting accompanying devices, i.e. position transmitter, reversing device, light barrier, etc., disconnect drive from mains (turn off main switch, remove mains plug from outlet [DIN VDE 0113 part 301; EN 60204-3-1; IEC 204-3-1]).
- Always switch off (0) machine and remove plug from outlet, when removing covers, mounting accompanying devices, position transmitter especially, light barrier, etc., or any other devices mentioned in the instruction manual.
- Only qualified personnel are authorized to work on the electrical components.

- Work on high voltage circuit areas is forbidden, except as stated in the respective regulations, e.g. DIN VDE 0105 part 1.
- Only specially trained personnel are authorized to complete repair work.
- Cables to be wired must be protected against expectable strain and fastened adequately.
- Cables near moving machine parts (e.g. V-belts) must be wired at a minimum distance of 25 mm (see DIN VDE 0113 part 301; EN 60204-3-1; IEC 204-3-1).
- For safety it is preferred to wire the cables separately from each other.
- Before connecting the mains line make sure that the mains voltage corresponds to the specifications on the motor rating plate and on the nameplate of the power pack.
- Connect this drive to a properly grounded outlet only. See Grounding Instructions.
- Electric accompanying devices and accessories must only be connected to safety low voltage.
- EFKA DC drives are protected according to overvoltage class 2 (DIN VDE 0160 § 5.3.1).
- Observe all safety guidelines before undertaking conversions or modifications.
- For repair and maintenance use only original replacement parts.



Warnings in the instruction manual which point out particular risks of personal injury or risk to the machine are marked with this symbol wherever applicable.



This symbol is a warning on the control and in the instruction manual. It indicates hazardous voltage.

**CAUTION** – In the case of failure this area can be current-carrying even after having turned the power off (non discharged capacitors).

- The drive is not an independently operating unit, but is designed to be incorporated into other machinery. It must not be put into service until the machinery into which it is to be incorporated has been declared in conformity with the provisions of the EC Directive.

**Save these instructions for future reference.**

## 2 Range of Applications

The drive is suitable for **lockstitch, chainstitch and overlock machines** of various manufacturers. Furthermore, stepping motor operation with the **AB62CV1469** control is possible with the SM210A control. See chapter "Connection Scheme of SM210A Stepping Motor Control".

With the help of adapter cords (adapter cords see Special Accessories), the drive can be used with the following controls replacing previous models:

Machine manufacturer	Replacing	Machine	Model	Thread trimming mode	Adapter cord
Aisin	AB62AV	Lockstitch	AD3XX,AD158 3310,EK1	0	1112815
Brother	AB62AV	Lockstitch	737-113,737-913	0	1112814
Brother	AC62AV	Chainstitch	FD3 B257	5	1112822
Brother		Lockstitch	B-891	22	1113290
Dürkopp Adler	DA62AV	Lockstitch	210,270	0	1112845
Global		Chainstitch	CB2803-56	5	1112866
Juki	AB62AV	Lockstitch	5550-6	14	1112816
Juki	AB62AV	Lockstitch	5550-7	14	1113132
Juki		Lockstitch	LU1510-7	20	1113319
Kansai	AC62AV	Chainstitch	RX 9803	5	1113130
Pegasus	AC62AV	Chainstitch	W500/UT W600/UT/MS with/without stitch condensing	5	1112821
Pegasus	AB60C	Backlatch		8	1113234
Pfaff	PF62AV	Lockstitch	563,953,1050, 1180	0	1113324
Pfaff		Lockstitch	1425	13	1113072
Rimoldi		Chainstitch	F27	5	1113096
Singer	SN62AV	Lockstitch	212 UTT	2	1112824
Union Special	US80A	Lockstitch	63900AMZ	10	1112823
Union Special	US80A	Chainstitch	34000, 36200	4	1112865
Union Special	AC62AV	Chainstitch	34700 with stitch lock	5	1112844
Union Special	US80A	Chainstitch	CS100, FS100	4	1112905
Yamato	AC62AV	Chainstitch	VC series	5	1113345
Yamato		Chainstitch	VG series	5	1113345
Yamato	AB60C	Backlatch	ABT3	9	1112826
Yamato		Backlatch	ABT13, ABT17	9	1113205
Yamato		Chainstitch	Stitch lock	21	1113345

## 2.1 Use in Accordance with Regulations

The drive is not an independently operating machine, but is designed to be incorporated into other machinery. It must not be put into service until the machinery into which it is to be incorporated has been declared in conformity with the provisions of the EC Directive (Appendix II, paragraph B of the Directive 89/392/EEC and supplement 91/368/EEC).

The drive has been developed and manufactured in accordance with the relevant EC standards:

EN 60204-3-1:1990      Electrical equipment of industrial machines:  
Particular requirements for industrial sewing machines, sewing units and sewing systems.

Operate the drive only in dry areas



### CAUTION

When selecting the installation site and the layout of the connecting cable, the Safety Instructions in chapter 1 must be followed with no exceptions.  
Particular attention should be paid to maintaining the proper distance from moving parts!

## 3 Scope of Supply

1	Direct current motor	<b>DC1600</b>
1	Electronic control	euramot <b>AB62CV1466</b> or <b>AB62CV1469</b> suitable for use with a <b>SM210 A....</b> stepping motor control <b>N158</b> for 230V (optional N159 for 110V) <b>EB301</b> (optional EB302, softer spring) <b>P5-2</b> in general <b>P5-4</b> Singer models 211, 212, 591 <b>NS106</b> (optional <b>NS106d</b> ) or <b>NS108</b> (optional <b>NS108d</b> )
	- Power pack	
	- Actuator	
1	Position transmitter	
1	Mains switch	
1	Adapter cord according to the intended type of machine	
1	Set of standard accessories consisting of:	<b>B131</b> belt guard, complete set of hardware motor mounting foot bracket 1 and 2, short potential equalization cord documentation
1	Set of accessories consisting of:	<b>Z3</b> pitman rod
1	Pulley	

### Note

If there is no metallical contact between drive (motor) and machine head, the potential equalization cord supplied with the unit is to be wired from the machine head to the terminal provided on the control box!

### 3.1 Special Accessories

<b>Control panel</b> Variocontrol V810	- part no. 5970153
<b>Control panel</b> Variocontrol V820	- part no. 5970154
<b>Reflection light barrier module</b> LSM001A	- part no. 6100028
<b>EFKANET interface</b> IF232-3, complete	- part no. 7900071

<b>Actuating solenoid</b> type EM1.. (for e. g. sewing foot lifting, backtacking, etc.)	- available models see specification "solenoids"
<b>Extension cable</b> for position transmitter P5-..., approx. 1100 mm long, complete with plug and socket connector	- part no. 1112247
<b>Extension cable</b> for motor connection, approx. 1500 mm long	- part no. 1111857
<b>Extension cable</b> for external actuator, approx. 750 mm long, complete with plug and socket connector	- part no. 1111845
<b>Extension cable</b> for external actuator, approx. 1500 mm long, complete with plug and socket connector	- part no. 1111787
<b>5-pin plug</b> with locking screw, for the connection of another external actuator	- part no. 0501278
<b>External actuator</b> type EB302 (softer spring) with approx. 250 mm connecting cable and 5-pin plug with locking screw	- part no. 4170012
<b>Foot control</b> type FB301 with one pedal for standing operation with approx. 1400 mm connecting cable and plug	- part no. 4170013
<b>Foot control</b> type FB302 with three pedals for standing operation with approx. 1400 mm connecting cable and plug	- part no. 4170018
<b>Fitting piece</b> for position transmitter	- part no. 0300019
<b>Pulley</b> 40 mm Ø with special belt intake and slip-off protection (use SPZ belt)	- part no. 1112223
<b>Pulley</b> 50 mm Ø with special belt intake and slip-off protection (use SPZ belt)	- part no. 1112224
<b>Knee switch</b> type KN3 (pushbutton) with cord of approx. 950 mm length without plug	- part no. 5870013
<b>Adapter cord</b> for the connection to AISIN high-speed seamer AD3XX, AD158, 3310 and overlock machine EK1	- part no. 1112815
<b>Adapter cord</b> for the connection to BROTHER models 737-113, 737-913	- part no. 1112814
<b>Adapter cord</b> for the connection to BROTHER chainstitch machine model FD3 B257	- part no. 1112822
<b>Adapter cord</b> for the connection to DÜRKOPP ADLER models 210 and 270	- part no. 1112845
<b>Adapter cord</b> for the connection to GLOBAL model CB2803-56	- part no. 1112866
<b>Adapter cord</b> for the connection to JUKI high-speed seamer with index -6	- part no. 1112816
<b>Adapter cord</b> for the connection to JUKI high-speed seamer with index -7	- part no. 1113132
<b>Adapter cord</b> for the connection to JUKI high-speed seamer model LU1510-7	- part no. 1113319
<b>Adapter cord</b> for the connection to KANSAI machine model RX 9803	- part no. 1113130
<b>Adapter cord</b> for the connection to PEGASUS models W500/UT, W600/UT/MS with or without stitch condensing	- part no. 1112821
<b>Adapter cord</b> for the connection to PEGASUS backlatch machine	- part no. 1113234
<b>Adapter cord</b> for the connection to PFAFF models 563, 953, 1050, 1180	- part no. 1112841
<b>Adapter cord</b> for the connection to PFAFF model 1425	- part no. 1113324
<b>Adapter cord</b> for the connection to RIMOLDI model F27	- part no. 1113096
<b>Adapter cord</b> for the connection to SINGER models 211, 212U, 212UTT and 591	- part no. 1112824
<b>Adapter cord</b> for the connection to UNION SPECIAL lockstitch machine model 63900AMZ (as a replacement for the US80A)	- part no. 1112823
<b>Adapter cord</b> for the connection to UNION SPECIAL model 34700 with stitch lock	- part no. 1112844
<b>Adapter cord</b> for the connection to UNION SPECIAL models 34000 and 36200 (as a replacement for the US80A)	- part no. 1112865
<b>Adapter cord</b> for the connection to UNION SPECIAL models CS100 and FS100	- part no. 1112905
<b>Adapter cord</b> for the connection to YAMATO VC/VG series chainstitch machines	- part no. 1113345
<b>Adapter cord</b> for the connection to YAMATO backlatch machine ABT3	- part no. 1112826
<b>Adapter cord</b> for the connection to YAMATO backlatch machines ABT13, ABT17	- part no. 1113205
<b>Sewing light transformer</b>	- please indicate line voltage and sewing light voltage (6,3V or 12V)
<b>7-pin plug</b> with locking screw (MAS 7100S) in plastic bag	- part no. 1110805
<b>37-pin SubminD</b> male connector with half-shell housing	- part no. 1112900
<b>Single pins for 37-pin SubminD</b> with strand of 5cm length	- part no. 1112899




## 5 Control Operation without Control Panel

### 5.1 Access Authorization upon Command Input

In order to prevent unintentional changes of preset functions the command input is distributed at various levels.

- The following persons have access:**
- the supplier to the highest and all subordinate levels by means of a code number
  - the technician to the next lower and all subordinate levels by means of a code number
  - the operator to the lowest level without code number

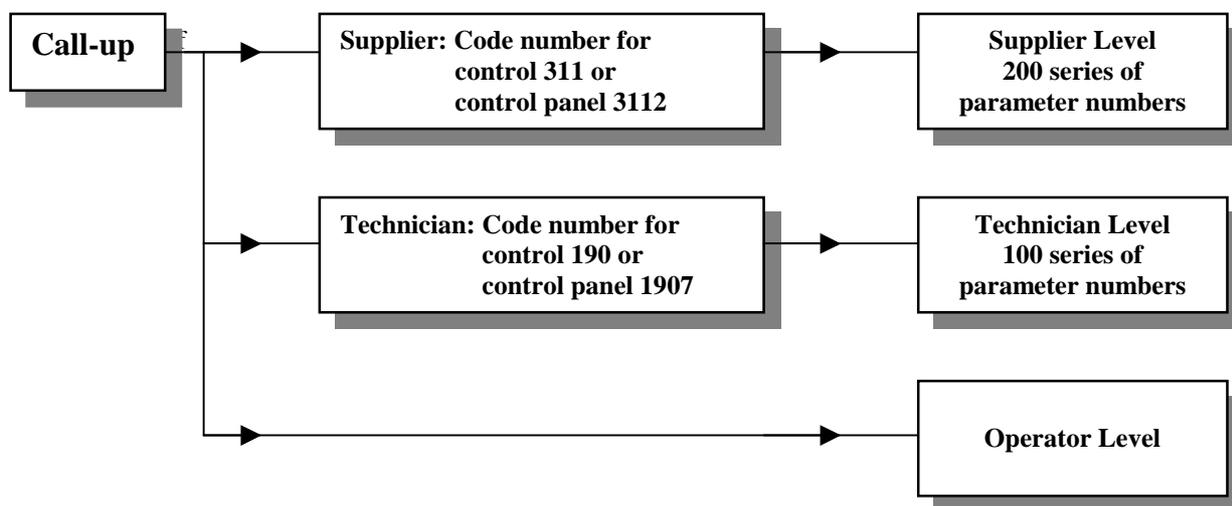


## 5.2 Programming the Code Number


### Note

The parameter numbers in the illustrations below serve as examples and may not be available in all program versions. In this case, the display shows the next higher parameter number. See List of Parameters.


1. Press the P key and turn power on

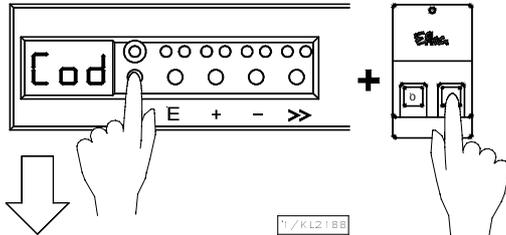


5. Press the + or – key to select the second digit

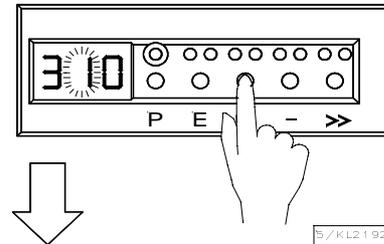


2. Press the >> key (first digit blinks)

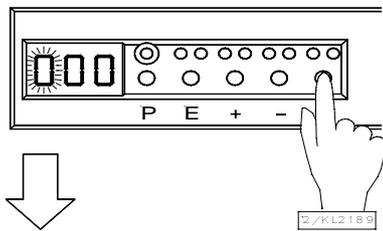


6. Press the >> key (third digit blinks)

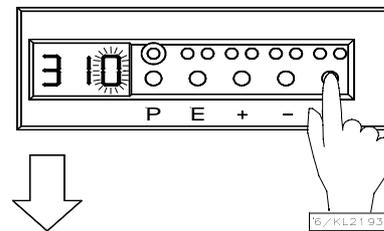


3. Press the + or – key to select the first digit  
 Technician level ==> Code no. 190  
 Supplier level ==> Code no. 311

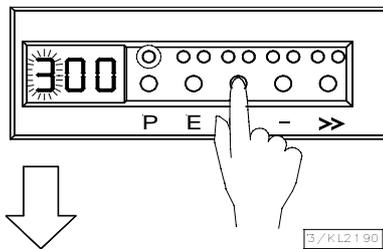


7. Press the + or – key to select the third digit

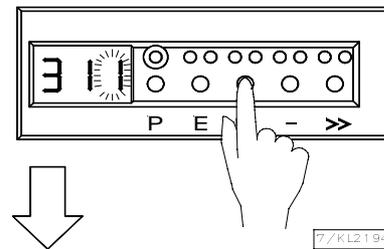

4. Press the >> key (second digit blinks)

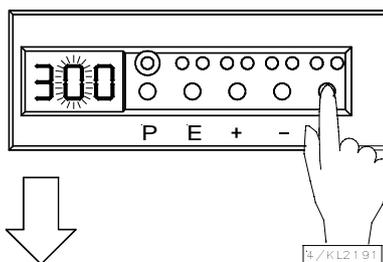


8. Press the E key; the parameter number is displayed, which is indicated by points between the digits.

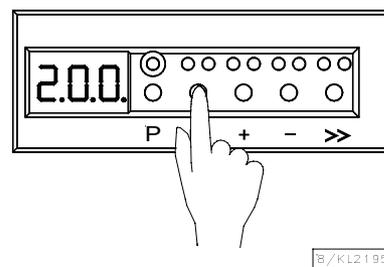


### 5.3 Parameter Selection

#### 5.3.1 Direct Selection


- 1. After code number input at the programming level

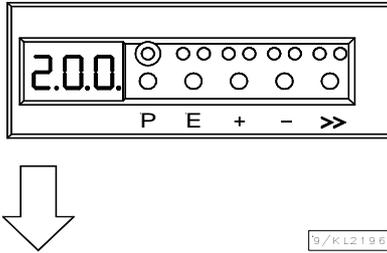


- 5. Press the + or - key to select the second digit

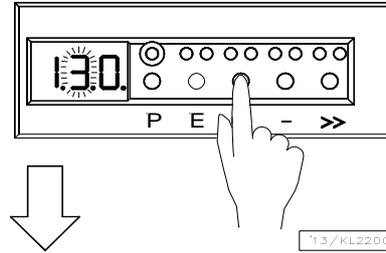


- 2. Press the >> key (first digit blinks)

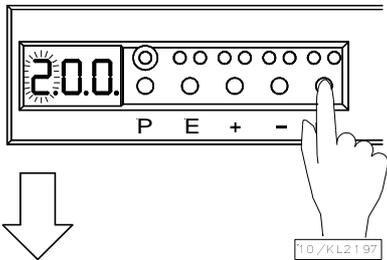


- 6. Press the >> key (third digit blinks)

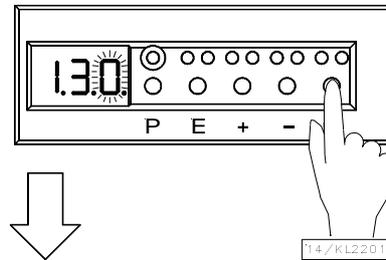


- 3. Press the + or - key to select the first digit

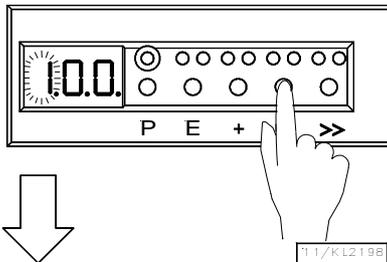


- 7. Press the + or - key to select the third digit

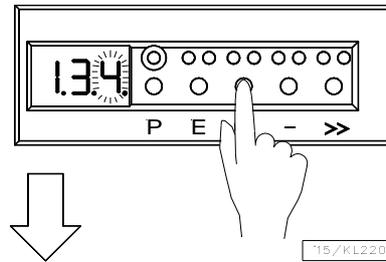


- 4. Press the >> key (second digit blinks)

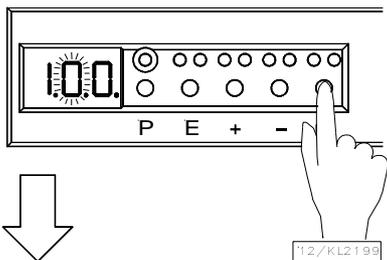

- 8. Press the E key; the parameter value is displayed. There are no points between the digits.

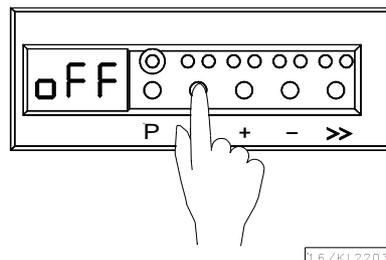


### 5.3.2 Changing Parameter Values

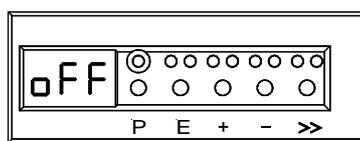

17/KL2204

Display after parameter value selection

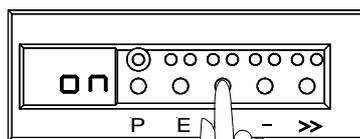


18/KL2205

Change the parameter value by pressing the + or - key

#### Option 1:


Press the **E** key. The next parameter number is displayed.

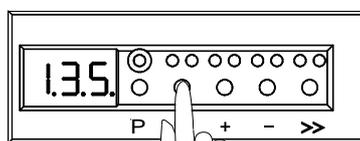

19/KL2206


#### Option 2:

Press the **P** key. The same parameter number is displayed.

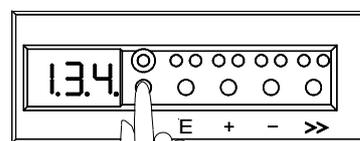


20/KL2207

Press the **P** key. Exit programming. The changed parameter values will be saved when you start sewing again!

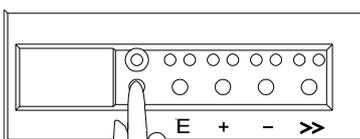

21/KL2208a


Press the **P** key. Exit programming. The changed parameter values will be saved when you start sewing again!

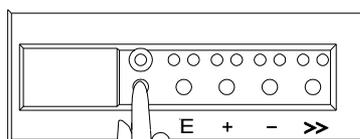


21/KL2208a

### 5.3.3 Parameter Selection with the +/- Keys


1. After code number input at the programming level

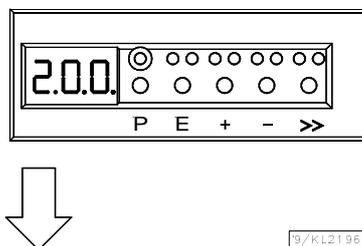


3. Select the previous parameter by pressing the - key

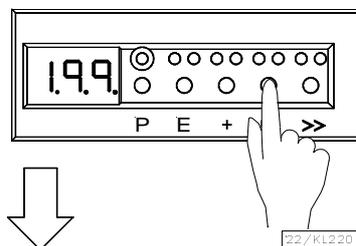

2. Select the next parameter by pressing the + key

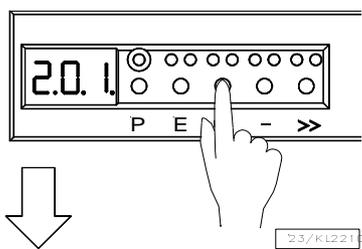


4. After pressing the E key, the parameter value is displayed

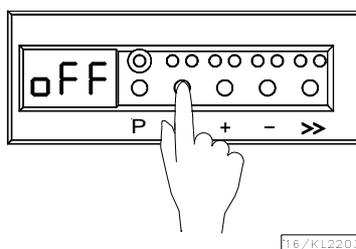

## 5.4 Changing All Parameter Values at the Operator Level

All parameter values at the operator level can be changed without code number input (see List of Parameters).

- Press the **P** key → The first parameter number will be displayed.
- Press the **E** key → The parameter value will be displayed.
- Press the +/- keys → The parameter value will be changed.
- Press the **E** key → The next parameter will be displayed.
- Press the **E** key → The parameter value will be displayed.
- Press the +/- keys → The parameter value will be changed.  
etc.
- Press the **P** key twice → Exit programming at the operator level

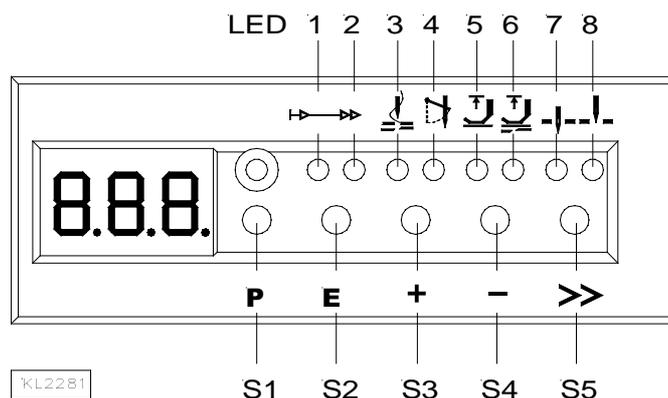

## 5.5 Function Switchover

Switchable functions can be changed by pressing the appropriate key. The switching state is indicated by light emitting diodes (LED). See above illustration!

**Table:** Assignment of functions to keys and LEDs

Function	Key	LED number
Single start backtack / Chain suction at the start of the seam	<b>E</b> (S2)	1 = on    2 = off
Double start backtack / Chain suction at the seam end	<b>E</b>	1 = off    2 = on
Start backtack Off / Chain suction at the start of the seam / seam end	<b>E</b>	1 = on    2 = on
Start backtack Off / Chain suction Off	<b>E</b>	1 = off    2 = off
Single end backtack / Tape cutter at the start of the seam	<b>+</b> (S3)	3 = on    4 = off
Double end backtack / Tape cutter at the seam end	<b>+</b>	3 = off    4 = on
End backtack Off / Tape cutter at the start of the seam / seam end	<b>+</b>	3 = on    4 = on
End backtack Off / Tape cutter Off	<b>+</b>	3 = off    4 = off
Sewing foot lift at stop in the seam (automatic)	<b>-</b> (S4)	5 = on    6 = off
Sewing foot lift at the seam end (automatic)	<b>-</b>	5 = off    6 = on
Sewing foot lift at stop in the seam and at the seam end (automatic)	<b>-</b>	5 = on    6 = on
Sewing foot lift (automatic) Off	<b>-</b>	5 = off    6 = off
Basic position down (position 1)	<b>&gt;&gt;</b> (S5)	7 = on    8 = off
Basic position up (position 2)	<b>&gt;&gt;</b>	7 = off    8 = on


## 5.6 Direct Input of Maximum Speed Limitation without Control Panel

The maximum speed of the machine must be limited to the specific level according to the application. Do the setting at the operator level on the control by means of the +/- keys during operation or at intermediate machine stop. This function is blocked at the start of the seam or after the seam end. The actual value shown on the display must be multiplied by 10. When using a control panel, the full speed value is displayed. See also chapter 6.4!

**Example:**

The value 330 on the control display corresponds to a speed of 3300 RPM.

**Important!** If the speed is changed, it is saved only after trimming and when you start sewing again.

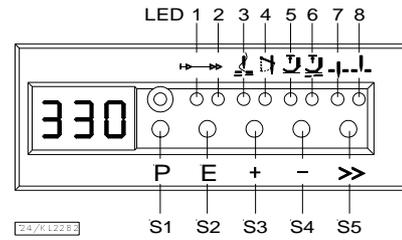


**5.7 Program Identification on the Control**

Function <b>without</b> control panel	Parameter
Program number, modification index and identification number display	<b>179</b>

After having selected parameter 179, the following information is displayed in succession:

**Example:**

- Select parameter **179** and press the **E** key!
- The display shows the program number (1463) shortened by one digit! Continue by pressing the >> key!
- The display shows the program modification index (A)! Continue by pressing the >> key!
- Identification number digit 1 and 2! Continue by pressing the >> key!
- Identification number digit 3 and 4! Continue by pressing the >> key!
- Identification number digit 5 and 6!

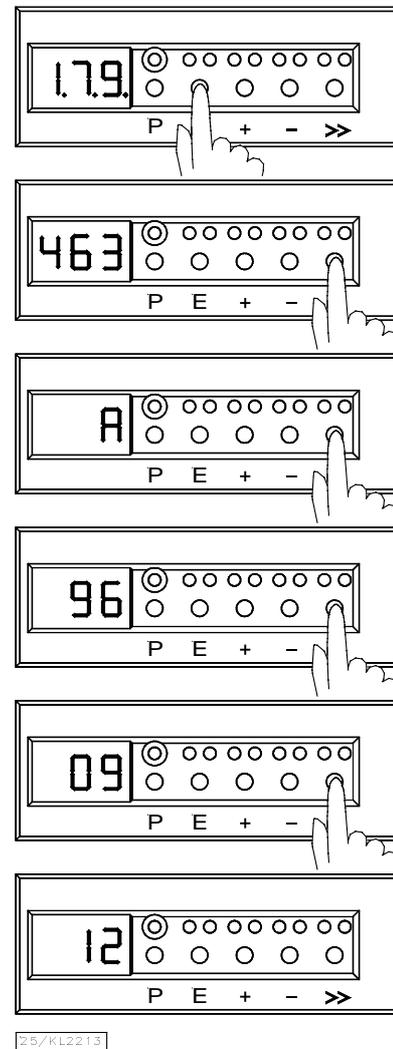

The routine is repeated after pressing the **E** key. Exit the routine after pressing the **P** key once. The next parameter number is displayed. Exit programming after pressing the **P** key. The drive is again ready for sewing.

## 6 Control Operation with Control Panel

### 6.1 Operation of the V810 Control Panel

#### 6.1.1 Code Number Input on the V810 Control Panel

Technician Level Code Number => 1907 and Supplier Level Code Number => 3112

**Example:** Technician level CODE number selection on the V810 control panel

	TURN POWER OFF		
<b>P</b>	+	TURN POWER ON. First digit blinks !	→ <b>C - 0 0 0 0</b>
<b>+</b>	<b>-</b>	Press the + or – key to select the first digit !	→ <b>C - 1 0 0 0</b>
<b>»</b>		Press the >> key ! Second digit blinks !	→ <b>C - 1 0 0 0</b>
<b>+</b>	<b>-</b>	Press the + or – key to select the second digit !	→ <b>C - 1 9 0 0</b>
<b>»</b>	<b>»</b>	Press the >> key twice ! Fourth digit blinks !	→ <b>C - 1 9 0 0</b>
<b>+</b>	<b>-</b>	Press the + or – key to select the fourth digit!	→ <b>C - 1 9 0 7</b>
<b>E</b>		If the CODE number is correct, the first PARAMETER number at the selected level is displayed !	→ <b>F - 1 0 0</b>

#### 6.1.2 Parameter Input at the Operator Level on the V810 Control Panel

**Example:** CODE number has not been input !

		TURN POWER ON !	→ <b>A b 6 2 c v</b>
<b>P</b>		First parameter at the operator level is displayed.	→ <b>F - 0 0 0</b>
<b>+</b>		Second parameter at the operator level is displayed. The next or previous parameter can be called by pressing the +/- keys.	→ <b>F - 0 0 1</b>
<b>E</b>		Parameter value is displayed !	→ <b>0 0 3</b>
<b>+</b>		Change parameter value by pressing the +/- keys.	→ <b>X X X</b>
<b>E</b>		Parameter value is entered. Display advances to the next parameter.	→ <b>F - 0 0 2</b>
<b>+</b>		Press the + key several times until the desired parameter is displayed !	→ <b>F - 0 0 9</b>
<b>E</b>		Parameter value is displayed !	→ <b>0</b>

+	New parameter value is displayed !	→	1
E	Next parameter is displayed !	→	F - 0 1 3
or			
P	Exit programming !	→	A b 6 2 c v

**These values are saved when you start sewing. They remain in effect even after turning the machine off!**

**Note!** The parameter number can also be selected directly, like the code number!

### 6.1.3 Parameter Input at the Technician/Supplier Level on the V810 Control Panel

**Example:** After CODE number input at the technician level.

		After CODE number input, the first PARAMETER number is displayed!	→	F - 1 0 0
+	Press the + key ! The next parameter number is displayed !		→	F - 1 1 0
E	Press the E key ! The parameter value is displayed !		→	0 1 8 0
+	-	Change the parameter value !	→	0 X X X
E	Parameter value is entered. Display advances to the next parameter.		→	F - 1 1 1
or				
P	Parameter value is entered. The actual PARAMETER number is displayed!		→	F - 1 1 0
or				
P	P	Press the P key twice ! Exit programming !	→	A b 6 2 c v

**These values are saved when you start sewing. They remain in effect even after turning the machine off!**

## 6.2 V820 Control Panel Operation

### 6.2.1 Code Number Input on the V820 Control Panel

**Technician Level Code Number => 1907 and Supplier Level Code Number => 3112**

**Example:** Technician level CODE number selection on the V820 control panel

TURN POWER OFF !						
P	+	TURN POWER ON !	→	C-0000		
1	9	0	7	Input CODE number !	→	C-1907

<b>E</b>	If CODE number is incorrect, repeat input !	→	C-0000 InFo F1
<b>E</b>	If CODE number is correct, the first PARAMETER number at the selected level is displayed.	→	F-100

## 6.2.2 Parameter Input at the Operator Level on the V820 Control Panel

**Example:** CODE number has not been input !

	TURN POWER ON !	→	4000 Ab62cv
<b>P</b>	Display shows no reading !	→	
<b>E</b>	First parameter at the operator level is displayed. PARAMETER number is not displayed.	→	c2 003
+	-	→	c2 XXX
<b>E</b>	Parameter value is entered. Display advances to the next parameter.	→	c1 003
or			
<b>P</b>	Exit programming !	→	4000 Ab62cv

## 6.2.3 Parameter Input at the Technician/Supplier Level on the V820 Control Panel

**Example:** After CODE number input at the technician level.

	After CODE number input, the first PARAMETER number is displayed.	→	F-100		
<b>E</b>	The most significant digit of the PARAMETER number blinks.	→	F-100		
<b>1</b>	<b>1</b>	<b>0</b>	Input desired PARAMETER number!	→	F-110
<b>E</b>	If PARAMETER number is incorrect, repeat input!	→	F-XXX InFo F1		
<b>E</b>	If PARAMETER number is correct	→	F-110 n1 180		
+	-	→	F-110 n1 XXX		
<b>E</b>	Parameter value is entered. Display advances to the next parameter.	→	F-111 n2- 4000		
or					
<b>P</b>	Parameter value is entered. A new PARAMETER number can be selected.	→	F-XXX		
or					
<b>P</b>	<b>P</b>	→	4000 Ab62cv		

**These values are saved when you start sewing. They remain in effect even after turning the machine off!**

### 6.3 Program Identification

Function <b>with</b> control panel	Parameter
Program number, modification index and identification number display	<b>179</b>

**Display example parameter 179 on the V810 control panel:**

- Select parameter 179!
- Press the **E** key → e. g. **1466h** is displayed (Program number with index)
- Press the **>>** key → e. g. **000420** is displayed (Identification number)
- Press the **P** key twice → **Ab62cv** is displayed (Sewing process can be started)


**Display example parameter 179 on the V820 control panel:**

- Select parameter 179!
- Press the **E** key → **466h 00042011** is displayed (Program number with index and identification number)  
shortened by 1 digit
- Press the **P** key twice → **4000 Ab62cv** is displayed (Sewing process can be started)

### 6.4 Direct Input of Maximum Speed Limitation (DED) with Control Panel


The maximum speed of the machine must be limited to the specific level according to the application. Do the setting at the operator level by means of the +/- keys after each seam end. The actual value is shown on the display. The speed setting range is between parameter 111 (upper limit) and parameter 121 (lower limit).

#### 6.4.1 Setting on the V810 Control Panel

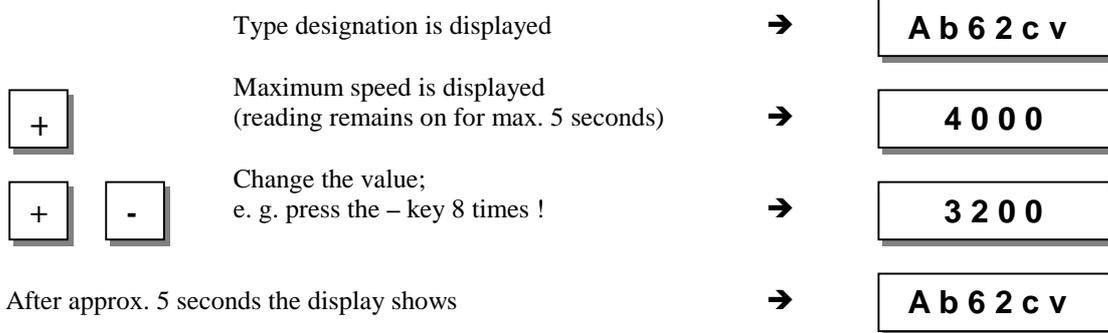

#### 6.4.2 Setting on the V820 Control Panel

Actual display value, in the direct mode

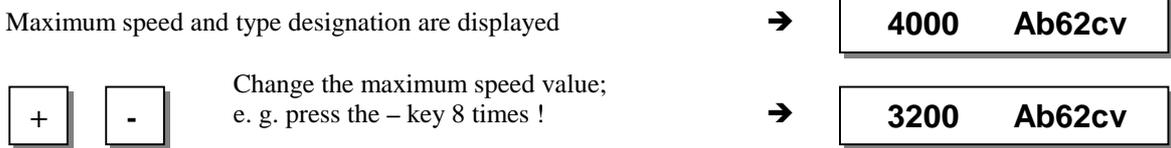

**This value is saved when you start sewing. It remains in effect even after turning the machine off!**

**Note**

Changing the setting of the maximum speed limitation also affects the start backtack, end backtack and stitch counting speeds.

## 6.5 Keys for Background Information (HIT) with V820

(key assignment see figure on the last page)

### Note

The following functions are possible only with the V820 control panel!

For fast operator information, the values of functions switched on by means of the 1, 2, 3, 4 and 9 keys are displayed on the control panel for approx. 3 seconds. During this time, the respective values can be varied directly by pressing the + or - key.

### 6.5.1 Example of HIT

#### Increase stitch-count seam section from 20 stitches to 25 stitches.

Stitch-count function (2 key) is off.

↓	Display after power on	→	4000 Ab62cv
2	Press the 2 key briefly ! Lefthand arrow and stitch-count function are on	→	Stc 020
+	Press the + key ! Increase the number of stitches from 20 to 25 !	→	Stc 025
	Display after approx. 3 seconds	→	4000 Ab62cv

#### Stitch-count function (2 key) is already on.

↓	Display after power on	→	4000 Ab62cv
2	Press the 2 key for at least 1 second! Lefthand arrow goes off momentarily; stitch-count function is on	→	Stc 020
+	Press the + key ! Increase the number of stitches from 20 to 25 !	→	Stc 025
	Display after approx. 3 seconds	→	4000 Ab62cv

**This value is saved when you start sewing. It remains in effect even after turning the machine off!**

#### Function key F

Various parameters, even higher-level parameters, can be switched on or off by pressing the function key (9 key). The following functions may be assigned to the function key:

1. Softstart ON/OFF
2. Ornamental backtack ON/OFF
3. Sewing start blocked with light barrier uncovered ON/OFF
4. Unlocking the chain ON/OFF

**The key assignment can be changed as follows:**

	Display after power on	→	4000 Ab62cv
P	Press the P key!	→	

<b>E</b>	Press the <b>E</b> key!	→	<b>c2 002</b>
<b>E</b>	Press the <b>E</b> key several times until the letter symbol <b>-F-</b> appears ! (ornamental backtack On/Off)	→	<b>-F- 2</b>
<b>-</b>	Press the <b>-</b> key! (softstart On/Off)	→	<b>-F- 1</b>
<b>P</b>	Press the <b>P</b> key!	→	<b>4000 Ab62cv</b>

**The assignment is completed.**

**The number of softstart stitches can be changed as follows:**

**Example: change number of stitches from 1 to 3 (softstart function (9 key) is off).**

<b>9</b>	Press the <b>9</b> key briefly ! The arrow above the key lights up (softstart function is On)	→	<b>SSc 001</b>
<b>+</b>	Press the <b>+</b> key ! Number of stitches increases.	→	<b>SSc 003</b>
	Display after 3 seconds	→	<b>4000 Ab62cv</b>

**Example: change number of stitches from 1 to 3 (softstart function (9 key) is already on).**

<b>9</b>	Press the <b>9</b> key for at least 1 sec. ! The arrow above the key goes off momentarily (softstart function is On)	→	<b>SSc 001</b>
<b>+</b>	Press the <b>+</b> key ! Number of stitches increases.	→	<b>SSc 003</b>
	Display after 3 seconds	→	<b>4000 Ab62cv</b>

**This value is saved when you start sewing. It remains in effect even after turning the machine off!**


## 6.6 Programming of Seams (TEACH IN)

- A maximum of 8 patterns with a total of 40 seams can be established.
- Programming is possible only if a code number has not been input after switching on!
- The functions “start backtack”, “end backtack”, “stitch counting”, “thread trimming” and “sewing foot lift” can be assigned individually to each seam.

Example 1:	Pattern 1	40	Seams
	Pattern 2-8	0	seams
Example 2:	Pattern 1	4	seams
	Pattern 2	5	seams
	Pattern 3	6	seams
	Pattern 4	25	seams
	Pattern 5-8	0	seams
Example 3:	Pattern 1	10	seams
	Pattern 2	15	seams
	Pattern 3-8	0	seams

Examples 1 and 2 show that optimal utilization of the storage capacity is possible.

The figure below shows all the functions assigned to programming of seams TEACH IN

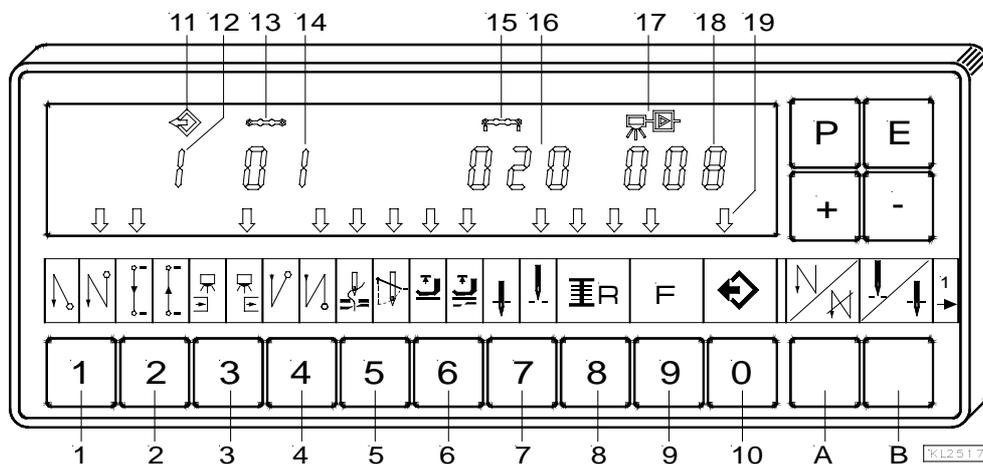

- |   |  |
|---|--|
| <p>1 = Single start backtack On (lefthand arrow)<br/>Double start backtack On (righthand arrow)<br/>Start backtack Off</p> <p>2 = Counted seam forward On (lefthand arrow)<br/>Counted seam backward On (righthand arrow)<br/>Counted seam Off</p> <p>3 = Light barrier On/Off</p> <p>4 = Single end backtack On (lefthand arrow)<br/>Double end backtack On (righthand arrow)<br/>End backtack Off</p> <p>5 = Thread trimmer On (lefthand arrow)<br/>Thread wiper On (righthand arrow)<br/>Thread trimmer and thread wiper On (both arrows)<br/>Thread trimmer and thread wiper Off</p> <p>6 = Sewing foot in the seam On (lefthand arrow)<br/>Sewing foot after seam end On (righthand arrow)<br/>Sewing foot in the seam and after seam end On (both arrows)<br/>Sewing foot Off</p> <p>7 = Basic position down (lefthand arrow)<br/>Basic position up (righthand arrow)</p> | <p>8 = No function</p> <p>9 = No function</p> <p>10 = Programmed seams TEACH IN On (lefthand arrow)<br/>Programmed seams TEACH IN Off</p> <p>11 = Program symbol</p> <p>12 = Display of program number</p> <p>13 = Seam symbol</p> <p>14 = Display of seam number</p> <p>15 = Symbol for number of stitches of a seam</p> <p>16 = Display of number of stitches</p> <p>17 = Light barrier symbol</p> <p>18 = Display of light barrier compensating stitches</p> <p>19 = Arrow for TEACH IN</p> <p>A = No function during programming</p> <p>B = No function during programming</p> |
|---|--|

### 6.6.1 Teach-in Mode

- Each seam pattern is programmed and stored separately.
- Exit the teach-in mode after pattern input.
- The values are saved when you start sewing.

#### Display configuration:

- 3 Program number (1...8)
- 04 Seam number (0...40)
- 020 Stitches for a seam with stitch counting (0...254)
- 008 Stitches after light barrier sensing (0...254)

→ 3 04 020 008

#### Programming:

After power On without code number input !

- |     |   |   |  |   |  |
|-----|---|---|--|---|--|
| 1 → | <span style="border: 1px solid black; padding: 2px;">P</span> | → | LC display is cleared  | → | <span style="border: 1px solid black; padding: 2px;"> </span>          |
| 2 → | <span style="border: 1px solid black; padding: 2px;">E</span> | → | Display of a parameter at the operator level                                       | → | <span style="border: 1px solid black; padding: 2px;">aaa bbb</span>    |
| 3 → | <span style="border: 1px solid black; padding: 2px;">0</span> | → | Lefthand arrow above the 0 key blinks.<br>Entry into pattern and seam programming. | → | <span style="border: 1px solid black; padding: 2px;">1 01 - - -</span> |
| 4 → | <span style="border: 1px solid black; padding: 2px;">0</span> | → | Changing the pattern number  | → | <span style="border: 1px solid black; padding: 2px;">2 01 - - -</span> |

The seam functions (e.g. sewing foot lift, start backtack, etc.) can be programmed using the keys on the control panel.

### 6.6.2 Seam with Stitch Counting

- ↓
- 2 → Lefthand arrow above the 2 key On; stitch counting is On; actual number of stitches is displayed. → 2 01 004

### 6.6.3 Backward Seam with Stitch Counting

- ↓
- 2 → Righthand arrow above the 2 key On; backward sewing is On; switch to forward sewing by pressing the key again. → 2 01 004

When sewing backward, all sewing operations including backtack are performed in reverse feeding direction. The functions "light barrier seam" and "backward seam" block each other, i.e. the light barrier cannot be switched on if the backward seam has been selected, or, backward sewing is not possible if the light barrier is switched on.

- + - Change the number of stitches using the +/- keys, or establish the number of stitches using the pedal for sewing !

### 6.6.4 Stitch Counting and/or Light Barrier

- ↓
- 3 → Light barrier covered/uncovered On; actual number of compensating stitches is displayed. → 2 01 004 007


→   Changing the number of compensating stitches

If stitch counting **and** light barrier are to be On at the same time, the stitch counting stitches must be programmed before the light barrier compensating stitches.

#### After programming the functions

→  → Seam is entered;  
the next seam is displayed. → 

→ **The seam is entered by pressing the E key or by heelback.**

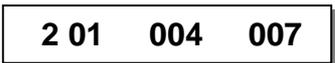→  → End of programming !  
The first seam section to be executed  
in the selected pattern is displayed. → 

After all seams have been programmed, each seam can be called again with the E key for checking.

#### Note


Several seam patterns cannot be programmed successively without interruption. Each pattern must be completed with the P key; otherwise it gets lost.

#### Note

The patterns are permanently saved only after you have started sewing.

### 6.6.5 Detailed Example

A seam 1 with stitch counting and start backtack, a seam 2 with stitch counting and a seam 3 with light barrier, end backtack and thread trimmer are to be programmed under pattern number 4.

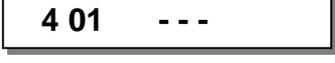	<b>Display before programming</b>	→	
1	→  → LC display is cleared	→	
2	→  → Display of a parameter at the operator level	→	
	↓		
3	→  → Lefthand arrow above the 0 key blinks. Pattern 1, seam 1	→	
	↓		
4	→  → Lefthand arrow above the 0 key blinks. Pattern 2, seam 1	→	
	↓		
5	→  → Lefthand arrow above the 0 key blinks. Pattern 3, seam 1	→	
	↓		
6	→  → Lefthand arrow above the 0 key blinks. <b>Pattern 4, seam 1</b>	→	
	↓		
7	→  → Lefthand arrow above the 1 key On. Single start backtack is on.	→	

<p>↓</p> <p>8 → <span style="border: 1px solid black; padding: 2px 5px;">6</span> →</p>	<p>Righthand arrow above the 6 key On. Sewing foot lifting at the seam end is on.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 01 - - -</span></p>
<p>↓</p> <p>9 → <span style="border: 1px solid black; padding: 2px 5px;">2</span> →</p>	<p>Lefthand arrow above the 2 key On. Stitch counting forward is on.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 01 000</span></p>
<p>10 → <span style="border: 1px solid black; padding: 2px 5px;">+</span> <span style="border: 1px solid black; padding: 2px 5px;">-</span></p>	<p>Change the number of stitches using the +/- keys, or establish the number of stitches using the pedal for sewing.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 01 017</span></p>
<p>→</p>	<p>Seam length is set at 17 stitches !</p>	
<p>11 → <span style="border: 1px solid black; padding: 2px 5px;">E</span> →</p>	<p><b>Pattern 4, seam 2</b></p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 02 - - -</span></p>
<p>↓</p> <p>12 → <span style="border: 1px solid black; padding: 2px 5px;">2</span> →</p>	<p>Lefthand arrow above the 2 key On. Stitch counting forward is on.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 02 000</span></p>
<p>13 → <span style="border: 1px solid black; padding: 2px 5px;">+</span> <span style="border: 1px solid black; padding: 2px 5px;">-</span></p>	<p>Change the number of stitches using the +/- keys, or establish the number of stitches using the pedal for sewing.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 02 008</span></p>
<p>→</p>	<p>Seam length is set at 8 stitches !</p>	
<p>14 → <span style="border: 1px solid black; padding: 2px 5px;">E</span> →</p>	<p><b>Pattern 4, seam 3.</b> Free seam is selected.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 03 - - -</span></p>
<p>↓</p> <p>15 → <span style="border: 1px solid black; padding: 2px 5px;">3</span> →</p>	<p>Lefthand arrow above the 3 key On. Light barrier covered/uncovered is on.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 03 - - - 000</span></p>
<p>16 → <span style="border: 1px solid black; padding: 2px 5px;">+</span> <span style="border: 1px solid black; padding: 2px 5px;">-</span></p>	<p>Change the number of stitches using the +/- keys; 5 compensating stitches are set.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 03 - - - 005</span></p>
<p>↓</p> <p>17 → <span style="border: 1px solid black; padding: 2px 5px;">4</span> →</p>	<p>Lefthand arrow above the 4 key On. Single end backtack is on.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 03 - - - 005</span></p>
<p>↓ ↓</p> <p>18 → <span style="border: 1px solid black; padding: 2px 5px;">5</span> →</p>	<p>Both arrows above the 5 key On. Thread trimmer and thread wiper are on.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 03 - - - 005</span></p>
<p>19 → <span style="border: 1px solid black; padding: 2px 5px;">E</span> →</p>	<p><b>Pattern 4, seam 4.</b> Advance to the next seam acknowledges the settings of the preceding seams.</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 04 - - -</span></p>
<p>20 → <span style="border: 1px solid black; padding: 2px 5px;">P</span> →</p>	<p>Exit programming; the first seam can be executed !</p>	<p>→ <span style="border: 1px solid black; padding: 2px 10px;">4 01 017</span></p>

### 6.6.6 Maximum Number of Seams Exceeded

If by inputting a program the total number of 40 seams is exceeded, the teach-in mode cannot be completed by pressing the **P** key. A new start of sewing is impaired. The display shows a warning (dEL). By pressing the **P** key again the pattern displayed will be deleted. Exit the teach-in mode now if the total number of 40 seams is not exceeded. Otherwise there will be a new warning.

**Display:**

**X:** Last input or selected pattern number (1...8)

**YY:** Number of programmed seams of the selected pattern (0...40)

**NN:** Total number of input seams if more than 40

→

dEL X YY NN

The user must now decide which pattern should be deleted !

→

0

→

Selection of the pattern to be deleted

→

dEL X YY NN

**X:** Pattern number

**YY:** Number of seams of this pattern

**NN:** Total number of input seams if more than 40

→

P

→

Deletion of the pattern

→

dEL X YY NN

**X:** Pattern number of the deleted pattern

**YY:** 00 = no more seam is programmed

**NN:** Total number of input seams if more than 40

Exit the teach-in mode if the number of seams equals or falls below 40, and the last input seam will be displayed.

### 6.6.7 Execution (Pattern) Mode

1 →

0

→

Switch on mode by pressing the **0** key  
(arrow above the 0 key lights up).  
Seam number 01 is displayed.

→

X 01 ZZZ

2 →

+

-

Select pattern 1...8.

→

X 01 ZZZ

3 →

E

→

If you do not wish to start with seam 1,  
press the **E** key several times until the  
desired seam number is displayed !

→

X 05 ZZZ

→

Start the pattern by pressing the pedal !

4 →

0

→

Complete the execution (pattern) mode;  
Switch off mode by pressing the **0** key !

## 7 Putting into Service

Before putting the control into service, the following must be ensured, checked and/or adjusted:

- The correct installation of the drive, position transmitter and accompanying devices, if necessary
- The correct selection of the trimming operation by means of parameter 290
- If necessary, the correct adjustment of the direction of motor rotation by means of parameter 161
- The correct selection of the functions of the keys (inputs) by means of parameters 240...249
- The correct positioning speed by means of parameter 110
- The correct maximum speed compatible with the sewing machine by means of parameter 111
- The setting of the remaining relevant parameters
- Start sewing in order to save the set values

## 8 Setting the Basic Functions

### 8.1 Direction of Motor Rotation

Function <b>with</b> or <b>without</b> control panel	Parameter
Direction of motor rotation (drE)	<b>161</b>

**Parameter 161 = 0**      Clockwise motor rotation (look at the motor shaft)  
**Parameter 161 = 1**      Counterclockwise motor rotation



#### ATTENTION

If the motor is mounted differently, e. g. at a different angle or with gear, make sure that the value set by means of parameter 161 corresponds to the direction of rotation.

### 8.2 Selection of Functional Sequences (Thread Trimming Operations)

Lockstitch, chainstitch and overlock machines with different functional sequences can be operated using this control. The functional sequences can be selected by means of parameter 290.



#### ATTENTION

Before switching functional sequences, detach cables from the inputs and outputs! Please ensure that the machine installed provides the functional sequence to be set!

**Settings with parameter 290 only after power On!**

Setting the functional sequence using parameter 290										
Mode	Designation	Adapter	Outputs							
	Power transistors →		FL ST2/35	VR ST2/34	M1 ST2/37	M2 ST2/28	M3 ST2/27	M4 ST2/36	M5 ST2/32	M6 ST2/30
0	<b>Lockstitch; e. g.</b> Brother (737-113, 737-913) Aisin (AD3XX, AD158, 3310; EK1) Pfaff (563, 953, 1050, 1180) Dürkopp Adler (210, 270)	<b>Functions</b> 1112814 1112815 1112841 1112845	FL FL FL FL	VR VR VR VR	FA1 FA1 + FA1 FA1 +	FA2 FA2 FA2 FA2	FW FW FW FW	FA1+2	ML	MST
1	<b>Lockstitch; e. g.</b> Singer (591, 211U, 212U)	<b>Functions</b> 1112824	FL FL	VR VR	FA FA	FA FA	FW FW	FL1 FL1	ML	MST
2	<b>Lockstitch; e. g.</b> Singer (212 UTT)	<b>Functions</b> 1112824	FL FL	VR VR	FA FA	FA FA	FSPL FSPL	FL1 FL1	ML	MST
3	<b>Lockstitch; e. g.</b> Dürkopp Adler (467)		FL	VR	FA	FSPL	FW		ML	MST
4	<b>Chainstitch; e. g. Union Special</b> (34000 and 36200 replacement for US80A)	<b>Functions</b> 1112865	FL FL	FA-R FA-R	M1	FA-V FA-V	FW FW	STV	ML ML	
5	(CS100 and FS100) <b>Chainstitch; parallel sequence</b> Yamato (VC series) Yamato (VG series) Kansai (RX 9803) Pegasus (W500/UT, W600/UT/MS with or without stitch condensing)	<b>Functions</b> 1112905 1113345 1113345 1113130 1112821	FL FL FL FL FL	FA-R STV STV STV STV	M1 M1 FA FA FA	FA-V M2 FA FA FA	FW M3 FW FW FW	M4	ML ML ML ML	MST
6	Brother (FD3-B257) Union Special (34700) Global (CB2803-56) Rimoldi (F27) <b>Chainstitch; tape cutter/fast scissors</b>	1112822 1112844 1112866 1113096	FL FL FL FL	STV STV STV STV	FA FA FA FW	FA FA FA FAO	FW FA FA FAU		NK ML	MST
7	<b>Overlock</b>		FL	KS	M1	M2	AH	FSPL	ML	MST
8	<b>Backlatch</b> Pegasus	<b>Functions</b> 1113234	FL		PD<=1 PD<=1	PD≥1 PD≥1	PD≥1*		ML	MST
9	<b>Backlatch</b> Yamato (ABT3) Yamato (ABT13, ABT17)	<b>Functions</b> 1112826 1113205	FL		PD<=1 PD<=1 PD<=1	PD≥1 PD≥1 PD≥1	PD≥1*		ML	MST
10	<b>Lockstitch; e. g.</b> Union Special (63900AMZ replacement for US80A) and on Refrey lockstitch machines	<b>Functions</b> 1112823	FL FL	FA-R FA-R	FSPL	FA-V FA-V	FW FW	VR	ML ML	MST
13	<b>Lockstitch; Pfaff</b> (1425)	1113324	FL	VR	FA	FSPL	FW	L-STL	ML	HP/FF
14	<b>Lockstitch; e. g.</b> Juki (5550-6) Juki (5550-7)	<b>Functions</b> 1112816 1113132	FL FL FL	VR VR VR	FA FA1+2 FA1+2	FSPL FA2 FA1+2 FZ	FW FW FW FW	FA1	ML ML	MST
16	<b>Overlock; feed-off-the-arm machine e.g.</b> Yamato (FD62)		FL	KS	RB	M2	AH	FSPL	ML	MST
17	<b>Chainstitch; Pegasus</b>		FL	LFA		FA	STS		ML	
19	<b>Lockstitch; Macofrey</b>		FL	FA-R	FSPL	FA-V	FW	VR	ML	MST
20	<b>Lockstitch; Juki</b> (LU1510-7)	1113319	FL	VR	FA	FSPL			ML	MST
21	<b>Chainstitch; Yamato</b> (stitch lock)	1113345	FL	STS	FA	STV	FW		ML	
22	<b>Lockstitch; Brother</b> (B-891)	1113290	FL	VR	FA	FSPL	FW	L-STL	ML	MST

\*) The signal issued at this output is inverted!

See the following page for letter symbols of the solenoid outputs!

**Explanation of letter symbols of the previous page!**

FL	= Sewing foot lifting	FL1	= Sewing foot lifting without pulsing
VR	= Backtacking	STV	= Stitch condensing
FA	= Thread trimmer	FA1	= Thread trimmer pos. 1...1A
FA2	= Thread trimmer pos. 1A...2	FA1+2	= Thread trimmer pos. 1...2
FA-V	= Thread trimmer forward	FA-R	= Thread trimmer backward
FAU	= Bobbin thread trimmer	FAO	= Needle thread trimmer
FSPL	= Thread tension release	AH	= Tape cutter
FW	= Thread wiper	AH1/AH2	= Fast scissors
ML/NK	= Machine running / Needle cooling	KS	= Chain suction
RB	= Chain blowing in opposite direction	STB	= Blow fabric onto stack
KB	= Chain blowing	KS+KB	= Chain suction + blowing
MST	= Machine at standstill	HP/FF1	= High lift for walking foot / Flip-flop 1
PD≥1	= Pedal steps 1...12	PD≤-1	= Pedal steps -1 / -2
PD=0	= Pedal step 0	PD-2	= Pedal step -2
L-STL	= Indicator lamp for stitch length	DR-UK	= Reversal of motor rotation
FZ	= Thread puller	STS	= Stitch lock
LFA	= Top cover thread cutter		

**Mode 0** Lockstitch Machines

- Thread trimmer from leading to trailing edge of slot position 1
- Thread trimmer from trailing edge of slot position 1 to leading edge of slot position 2
- Thread trimmer from leading edge of slot position 1 to leading edge of slot position 2
- Thread wiper for a programmable time (t6)
- Sewing foot lifting (see chapter "Sewing Foot Lifting")
- Backtacking (see chapter "Start Backtack" and "End Backtack")
- Signal "machine running"
- High lift for walking foot/flip-flop at limited speed after pressing the key

**Mode 1** Lockstitch Machines (Singer 591, 211U, 212U)

- Thread trimmer from trailing edge of slot position 1 to leading edge of slot position 2
- Drive stops at the trailing edge of slot position 2
- Thread wiper for a programmable time (t6)
- Sewing foot lifting (see chapter "Sewing Foot Lifting")
- Backtacking (see chapter "Start Backtack" and "End Backtack")
- Signal "machine running"
- High lift for walking foot/flip-flop at limited speed after pressing the key

**Mode 2** Lockstitch Machines (Singer 212 UTT)

- Thread trimmer for a programmable time (kt2) after intermediate stop in position 1
- Thread trimmer from leading edge of slot position 1 to leading edge of slot position 2
- Sewing foot lifting (see chapter "Sewing Foot Lifting")
- Backtacking (see chapter "Start Backtack" and "End Backtack")
- Signal "machine running"
- High lift for walking foot/flip-flop at limited speed after pressing the key

**Mode 3** Lockstitch Machines with Thread Trimming System (e. g. Dürkopp Adler)

- Thread trimmer for programmable increments (iFA) after intermediate stop in position 1
- Thread tension release from trailing edge of slot position 2 after delay (FSE) during ON period (FSA)
- Thread wiper for a programmable time (t6)
- Sewing foot lifting (see chapter "Sewing Foot Lifting")
- Backtacking (see chapter "Start Backtack" and "End Backtack")
- Signal "machine running"
- High lift for walking foot/flip-flop at limited speed after pressing the key

**Mode 4** Chainstitch Machines (Union Special)

- Thread trimmer forward after stop in position 2 after delay (kd2) during ON period (kt2)
- Thread trimmer backward after stop in position 2 after delay (kd1) during ON period (kt1)
- Thread wiper after stop in position 2 after delay (kd3) during ON period (kt3)
- Sewing foot lifting (see chapter "Sewing Foot Lifting")
- Stitch condensing (see chapter "Start Stitch Condensing" and "End Stitch Condensing")
- Signal "machine running"

- Mode 5** Chainstitch Machines In General
- Signal M1 after stop in position 2 after delay (kd1) during ON period (kt1)
  - Signal M2 after stop in position 2 after delay (kd2) during ON period (kt2)
  - Signal M3 after stop in position 2 after delay (kd3) during ON period (kt3)
  - Signal M4 after stop in position 2 after delay (kd4) during ON period (kt4)
  - Time-delayed (kdF) sewing foot lifting after standstill in position 2 (see chapter "Sewing Foot Lifting")
  - Stitch condensing (see chapter "Start Stitch Condensing" and "End Stitch Condensing")
  - Signal "machine running" / Signal "machine at standstill"
- Mode 6** Chainstitch Machines with Tape Cutter or Fast Scissors
- Signal M1 after stop in position 2 after delay (kd1) during ON period (kt1)
  - Signal M2 after stop in position 2 after delay (kd2) during ON period (kt2)
  - Fast scissors (M3) after delay (kd3) during ON period (kt3) alternating with M4
  - Fast scissors (M4) after delay (kd4) during ON period (kt4) alternating with M3
  - Sewing foot lifting (see chapter "Sewing Foot Lifting")
  - Stitch condensing (see chapter "Start Stitch Condensing" and "End Stitch Condensing")
  - Signal "machine running" / Signal "machine at standstill"
- Mode 7** Overlock Machines
- Signal M1 after stop in position 2 after delay (kd1) during ON period (kt1)
  - Signal M2 after stop in position 2 after delay (kd2) during ON period (kt2) or if parameter 232=1, as **fast scissors** alternating with M3 (**parameter 282=0**)
  - Chain suction during stitch count (c1) at the start of the seam and stitch counting (c2) at the seam end
  - Thread tension release after light barrier uncovered
  - Tape cutter at the start of the seam after stitch count (c3) and at the seam end after stitch count (c4) and the delay time (kd3)
  - Sewing foot lifting (see chapter "Sewing Foot Lifting")
  - If parameter 018 = 1, parameter 022 must also be set at "1"
  - Signal "machine running" / Signal "machine at standstill"
- Mode 8** Backlatch Machines (Pegasus)
- Signal M1 with pedal in positions -1 and -2
  - Signal M2 with pedal in positions 1-12
  - Inverted signal M3 with pedal in positions 1-12
  - Sewing foot lifting (see chapter "Sewing Foot Lifting")
  - Signal "machine running" / Signal "machine at standstill"
  - Operation at automatic speed
  - Automatic speed has priority over machine run blockage
  - Machine run blockage effective with open contact (**input in1 / parameter 240=6**)
  - »Automatic speed has priority over machine run blockage«
  - Key for operation at automatic speed (**input in3 / parameter 242=10**)
- Mode 9** Backlatch Machines (Yamato)
- Signal M1 with pedal in positions -1 and -2
  - Signal M2 with pedal in positions 1-12
  - Inverted signal M3 with pedal in positions 1-12
  - Sewing foot lifting (see chapter "Sewing Foot Lifting")
  - Signal "machine running" / Signal "machine at standstill"
  - Key for operation at automatic speed (**input in3 / parameter 242=10**)
  - Machine run blockage effective with open contact (**input in1 / parameter 240=6**)
  - Machine run blockage has priority over automatic speed
- Mode 10** Lockstitch Machines (Refrey Trimmer)
- Thread trimmer forward from trailing edge of slot position 1 to leading edge of slot position 2
  - Thread trimmer backward after stop in position 2 during ON period (kt1).
  - After that the signal is pulsed.
  - Thread tension release whose signal is parallel to the thread trimmer
  - Thread wiper (M3) after delay (kd3) during ON period (kt3)
  - Sewing foot lifting (see chapter "Sewing Foot Lifting")
  - Backtacking (see chapter "Start Backtack" and "End Backtack")
  - Signal "machine running"
- Mode 13** Lockstitch Machines with Thread Trimming System (Pfaff 1425)
- Thread trimmer for programmable increments (iFA) after intermediate stop in position 1
  - Thread tension release from leading edge of slot position 1 after delay (FSE) during ON period (FSA)
  - Thread wiper for a programmable time (t6)
  - Sewing foot lifting (see chapter "Sewing Foot Lifting")
  - Backtacking (see chapter "Start Backtack" and "End Backtack")
  - Signal "machine running"
  - High lift for walking foot/flip-flop at limited speed after pressing the key

- Key for function "needle up" (**input in1 / parameter 240=2**)
- Key for function "intermediate backtack" (**input in2 / parameter 241=16**)
- Key for run to position 2 (**input in3 / parameter 242=24**)
- Key for speed limitation (n12) (**input in4 / parameter 243=11**)
- Key for flip-flop speed limitation (n11) (**input in5 / parameter 244=22**)
- Key for speed limitation (n9) (**input in7 / parameter 246=23**)
- Key for high lift for walking foot with speed limitation (n10) operational mode stored (**input in8 / parameter 247=14**)

**Mode 14** Lockstitch Machines (Juki 5550-6, 5550-7)

- Thread trimmer (M1) from trailing edge of slot position 1 to leading edge of slot position 2
- Thread trimmer (M4) from leading edge of slot position 1 to leading edge of slot position 2
- Thread wiper (M3) for a programmable time (t6)
- Thread puller (M2) after stop in position 2 after delay (kd2) during ON period (kt2)
- Sewing foot lifting (see chapter "Sewing Foot Lifting")
- Backtacking (see chapter "Start Backtack" and "End Backtack")
- Signal (M5) "machine running" / Signal (M6) "machine at standstill"

**Mode 16** Overlock Machines (Feed-Off-The-Arm Machines) only with V820 and slide-in strip 7!

- Chain suction (VR) during stitch count (c1) at the start of the seam
- Thread tension release (M4) On at the seam end after light barrier uncovered and the compensating stitches until pedal position 0 (neutral) after machine standstill
- Tape cutter (M3) if parameter 232=0 at the start of the seam after stitch count (c3) and at the seam end after stitch count (c4) during ON period (kt3)
- Fast scissors if parameter 232=1 at the start of the seam after stitch count (c3) and at the seam end after stitch count (c4) alternating with output (M3) during ON period (kt3) and output (M8) during ON period (At1)
- Chain blowing in opposite direction (M1) at the seam end after delay (kd1) during ON period (kt1)
- Blow fabric onto stack (M7) On at the seam end after light barrier uncovered until machine standstill with a time lapse (kt5)
- Signal (M2) at the seam end after delay (kd2) during ON period (kt2)
- Sewing foot lifting with pedal in position -1 or -2
- Signal "machine running"

**Mode 17** Chainstitch Machines (Pegasus Stitch Lock)

- Thread trimmer (FA) after stop depending on angle after delay (kd2) during ON period (kt2)
- Stitch lock signal (STS) after intermediate stop in position 2 after delay (kd3) during ON period (kt3) and after stop depending on angle
- Top cover thread cutter (LFA) after stop depending on angle after delay (kd2) during ON period (kt2)
- Time-delayed (kdF) sewing foot lifting after standstill in position 2 (see chapter "Sewing Foot Lifting")
- Signal "machine running"

**Mode 19** Lockstitch Machines (Macofrey) Functions as in mode 10!**Mode 20** Lockstitch Machines (Juki LU1510-7)

- Thread trimmer (FA) for programmable increments (iFA) after intermediate stop in position 1
- Thread tension release from trailing edge of slot position 2 after delay (FSE) during ON period (FSA)
- Thread wiper after stop in position 2 after delay (kd3) during ON period (kt3)
- Sewing foot lifting (see chapter "Sewing Foot Lifting")
- Backtacking (see chapter "Start Backtack" and "End Backtack")
- Signal (M5) "machine running" / Signal (M6) "machine at standstill"

**Mode 21** Chainstitch Machines (Yamato Stitch Lock)

- Thread trimmer (M1) after stop in position 2 after delay (kd1) during ON period (kt1)
- Thread wiper (M3) after stop in position 2 after delay (kd3) during ON period (kt3)
- Stitch lock signal (STV) after stop in position 1 after delay (kd2) during ON period (kt2)
- Time-delayed (kdF) sewing foot lifting after standstill in position 2 (see chapter "Sewing Foot Lifting")
- Stitch condensing (M2) (see chapter "Start Stitch Condensing" and "End Stitch Condensing")
- Signal (M5) "machine running"

**Mode 22** Lockstitch Machines (Brother B-891)

- Thread trimmer for programmable increments (iFA) after intermediate stop in position 1
- Thread tension release from trailing edge of slot position 2 after delay (FSE) during ON period (FSA)
- Thread wiper for a programmable time (t6)
- Sewing foot lifting (see chapter "Sewing Foot Lifting")
- Backtacking (see chapter "Start Backtack" and "End Backtack")
- Signal "machine running"
- High lift for walking foot/flip-flop at limited speed after pressing the key

See List of Parameters chapter "Timing Diagrams" for the various modes!

### 8.3 Functions of the Keys Inputs in1...i10

Function <b>with</b> or <b>without</b> control panel				Parameter
Input 1	selectable input functions	0...44	(in1)	240
Input 2	“ “	0...44	(in2)	241
Input 3	“ “	0...44	(in3)	242
Input 4	“ “	0...44	(in4)	243
Input 5	“ “	0...44	(in5)	244
Input 6	“ “	0...44	(in6)	245
Input 7	“ “	0...44	(in7)	246
Input 8	“ “	0...44	(in8)	247
Input 9	“ “	0...44	(in9)	248
Input 10	“ “	0...44	(i10)	249

See List of Parameters for possible input functions of the keys.

### 8.4 Positioning Speed

Function <b>with</b> or <b>without</b> control panel		Parameter
Positioning speed	(n1)	<b>110</b>

The positioning speed can be set by means of parameter 110 on the control within a range of 70...390 RPM.

### 8.5 Maximum Speed Compatible with the Sewing Machine

The maximum speed of the machine is determined by the selected pulley and by the following settings:

- Set the maximum speed using parameter 111 (n2)
- Set the maximum speed limitation to the specific level according to the application as described in chapter "Direct Input of Maximum Speed Limitation (DED)".

### 8.6 Maximum Speed

Function <b>with</b> or <b>without</b> control panel		Parameter
Maximum speed	(n2)	<b>111</b>

#### Note

See instruction manual of the sewing machine manufacturer for the maximum speed of the sewing machine.

#### Note

Select the pulley such that the motor runs at approx. 4000 RPM with max. number of stitches.

When programming 3-digit or 4-digit parameter values on the control (without control panel), the 2-digit or 3-digit values displayed must be multiplied by 10.

### 8.7 Positions

Before setting the position transmitter ensure that the direction of motor shaft rotation is set correctly!



**CAUTION!**

If the motor is mounted differently, e. g. at a different angle or with gear, make sure that the direction of rotation is correct. Reset the positions if necessary.



**CAUTION!**

Turn power off before adjusting the positioning discs.




**CAUTION!**

Be very careful when adjusting the positioning discs.  
**Risk of injury!**

Please ensure that positioning discs and generator disc (inner disc) are not damaged.

The positions are set as follows:

- Remove position transmitter cover after loosening the screw.
- Select basic position **needle down** (LED 7 on the control lights up) by means of the S5 key.
- Turn central disc for position 1 to the desired direction.
- Press the pedal briefly forward.
- Check the stop position.
- Heelback (trimming).
- Select basic position **needle up** (LED 8 on the control lights up) by means of the S5 key.
- Turn outer disc for position 2 to the desired direction.
- Press the pedal briefly forward.
- Check the stop position.
- Repeat procedure if necessary.
- Select the desired basic position by means of the S5 key.
- Put cover on again and tighten screw.

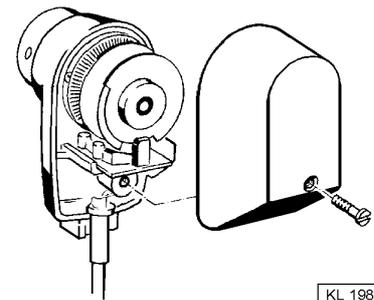

When using a control panel, perform the same sequence by means of the keys for the basic position.

**Note**

For functional sequences that are controlled by the slot width, set slot width if necessary. Initiate the desired functional sequence in order to check the setting. The opening angle of position transmitters with adjustable slot width must not be below 20°.

**Note**


To ensure a correct trimming operation the positions 1 and 2 must not overlap.

### 8.8 Display of the Signal and Stop Positions

Function <b>with</b> or <b>without</b> control panel		Parameter
Display of positions 1 and 2	(Sr3)	<b>172</b>

The position settings can easily be checked by means of parameter 172.

- Select parameter 172
- Without control panel, the control display shows "PoS"
- With control panel, the control panel display shows "Sr3"
- Turn handwheel according to the direction of motor rotation

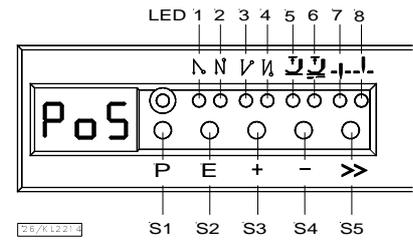

#### Control display without control panel

- LED 7 on corresponds to position 1
- LED 7 turns off corresponds to position 1A
- LED 8 on corresponds to position 2
- LED 8 turns off corresponds to position 2A

#### V810/V820 control panel display

- Arrow above symbol "position 1" on the 4 key (V810) / on the 7 key (V820) is displayed corresponds to position 1
- Arrow above symbol "position 1" on the 4 key (V810) / on the 7 key (V820) is displayed corresponds to position 1A
- Arrow above symbol "position 2" on the 4 key (V810) / on the 7 key (V820) is displayed corresponds to position 2
- Arrow above symbol "position 2" on the 4 key (V810) / on the 7 key (V820) is displayed corresponds to position 2A

**If the V810 or V820 control panel is connected, the positions will be displayed only on the control panel!**

## 8.9 Braking Characteristics

Function <b>with</b> or <b>without</b> control panel		Parameter
Braking effect when varying the preset value $\leq 4$ stages	(br1)	<b>207</b>
Braking effect when varying the preset value $\geq 5$ stages	(br2)	<b>208</b>

- Parameter 207 regulates the braking effect between speed stages
- Parameter 208 influences the braking effect for the stop

The following applies to all setting values:

The higher the value, the stronger the braking reaction!

## 8.10 Braking Power at Standstill

Function <b>with</b> or <b>without</b> control panel		Parameter
Braking power at standstill	(brt)	<b>153</b>

This function prevents unintentional "wandering" of the needle at standstill.

The effect can be checked by turning the handwheel.

- The braking power is effective at standstill
  - at stop in the seam
  - after the seam end
- The effect can be set
- The higher the set value, the stronger the braking power

### 8.11 Starting Characteristics

Function <b>with</b> or <b>without</b> control panel	Parameter
Starting edge (ALF)	<b>220</b>

The drive acceleration dynamics can be adapted to the sewing machine characteristic (light/heavy).

- High setting value = high acceleration

With a high starting edge setting and, in addition, possibly high braking parameter values on a light machine, the characteristic may appear coarse. In this case, one should try to optimize the settings.

### 8.12 Actual Speed Display

Function <b>with</b> or <b>without</b> control panel	Parameter
Actual speed display (nIS)	<b>139</b>

If parameter 139 = ON, the V810/820 display shows the following information:

**During operation:**

- The actual speed
- **Example:** 2350 revolutions per minute



**At stop in the seam:**

- The stop indication



**At standstill after trimming:**

- On the V810, indication of the type of control
- On the V820, indication of the set maximum speed and the type of control
- **Example:** 3300 revolutions per minute and type of control AB62CV




### 8.13 Supply Voltage 5V or 15V



**CAUTION!**  
Turn power off before opening the control box!

There is a supply voltage of +5V on socket B18/6 for external devices. After opening the cover, this voltage can be changed to +15V by replugging a multipole connector J1 on the printed circuit board.

- +5V = Connect righthand pins 1 and 2 with jumper (factory setting)
- +15V = Connect lefthand pins 3 and 4 with jumper

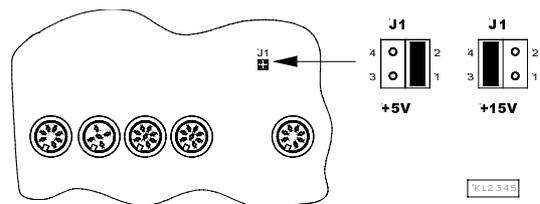

## 9 Functions with or without Control Panel

### 9.1 First Stitch after Power On

Function <b>with</b> or <b>without</b> control panel	Parameter
1 stitch at positioning speed after power on (Sn1)	<b>231</b>

If parameter 231 is on, the first stitch after power on will be performed at positioning speed for the protection of the sewing machine. This is independent of the pedal position and the softstart function.

### 9.2 Softstart

Function <b>with</b> or <b>without</b> control panel	Parameter
Softstart On/Off (SSt)	<b>134</b>

#### Functions:

- after power on
- at the beginning of a new seam
- speed pedal controlled and limited to (n6)
- lower speed of a parallel function prevailing (e. g. start backtack, stitch counting)
- stitch counting synchronized to position 1
- suspension with pedal in position 0 (neutral)
- interruption by full heelback (position -2)

When using the V820 control panel, direct access by means of the function key (9 key) is possible!

Function <b>with</b> control panel	Parameter
Softstart On/Off (-F-)	<b>008 = 1</b>

#### 9.2.1 Softstart Speed

Function <b>with</b> or <b>without</b> control panel	Parameter
Softstart speed (n6)	<b>115</b>

When programming 3-digit or 4-digit parameter values on the control, the 2-digit or 3-digit values displayed must be multiplied by 10.

#### 9.2.2 Softstart Stitches

Function <b>with</b> or <b>without</b> control panel	Parameter
Number of softstart stitches (SSc)	<b>100</b>

### 9.3 Sewing Foot Lifting

Function <b>without</b> control panel	Control
Automatic in the seam Automatic after thread trimming	lefthand LED above key On righthand LED above key On S4 key S4 key

Function <b>with</b> control panel		V810	V820
Automatic in the seam	lefthand arrow above key On	3 key	6 key
Automatic after thread trimming	righthand arrow above key On	3 key	6 key
If parameter 290 = 16, with slide-in strip "7"	lefthand arrow above key On		9 key

Function <b>with</b> or <b>without</b> control panel		Parameter
Automatic sewing foot with pedal forward at the seam end if light barrier or stitch counting is on	(AFL)	<b>023</b>
Thread tension release and sewing foot at the seam end or at intermediate stop and at the seam end (effective only in mode 13)		<b>024</b>
Switch-on delay with pedal in position -1 (half heelback)	(t2)	<b>201</b>
Start delay after switching off the sewing foot lift signal	(t3)	<b>202</b>
Time of full power	(t4)	<b>203</b>
Duty ratio (ED) with pulsing	(t5)	<b>204</b>
Delay after thread wiping until sewing foot lifting	(t7)	<b>206</b>
Delay after thread trimming without thread wiper until sewing foot lifting	(tFL)	<b>211</b>
Selection of the sewing foot lift function	(FLP)	<b>236</b>

**Sewing foot is lifted:**

- in the seam
  - by half heelback (position -1)
  - or automatically (by means of the **S4** key on the control, lefthand LED lights up)
  - or automatically (by means of the **3** key on the V810 control panel)
  - or automatically (by means of the **6** key on the V820 control panel)
- after thread trimming
  - by pressing a key depending on the preselection of parameters 240...249
  - by heelback (position -1 or -2)
  - or automatically (by means of the **S4** key on the control, righthand LED lights up)
  - or automatically (by means of the **3** key on the V810 control panel)
  - or automatically (by means of the **6** key on the V820 control panel)
  - by pressing a key depending on the preselection of parameters 240...249
  - automatically by means of light barrier with pedal forward according to the setting of parameter 023
  - automatically by means of stitch counting with pedal forward according to the setting of parameter 023
  - switch-on delay after thread wiper (t7)
  - switch-on delay without thread wiper (tFL)

It is possible to prevent unintentional foot lifting before thread trimming when changing from pedal position 0 (neutral) to position -2 by setting a switch-on delay (t2) by means of parameter 201.

**Holding power of the lifted foot:**

The sewing foot is lifted by full power. Then the system switches automatically to partial power in order to reduce the load for the control and the connected solenoid.

Set the duration of full power by means of parameter 203 and the partial holding power by means of parameter 204.



**CAUTION!**

If the holding power is set too high, the solenoid and the control may be permanently damaged. Please observe the permissible duty ratio (ED) of the solenoid, and set the appropriate value according to the table below.

Stage	Duty ratio (ED)	Effect
1	12.5 %	low holding power
2	25.0 %	
3	37.5%	
4	50.0%	
5	62.5%	
6	75.0%	
7	87.5%	
0	100.0%	high holding power (full power)

**Sewing foot lowers:**

- Press pedal to position 0 (neutral)
- Press pedal to position ½ (slightly forward)
- Release key for manual sewing foot lift

Upon pressing the pedal forward from lifted sewing foot, the start delay (t3) that can be set by means of parameter 202 becomes effective.

The following settings are possible with parameter 236:

- Parameter 236 = 0** Sewing foot lifting is possible from all positions.  
**Parameter 236 = 1** Sewing foot lifting is possible only from position 2.  
**Parameter 236 = 2** Sewing foot lifting is stored in pedal position -1 or -2. The storing can be undone by pressing the pedal slightly forward.

See List of Parameters chapter "**Timing Diagrams**"!

## 9.4 Start Backtack/Start Stitch Condensing

Function <b>without</b> control panel		Control
Single start backtack Double start backtack Start backtack Off	LED 1 On LED 2 On both LEDs Off	S2 key
Start stitch condensing On; number of stitches with stitch regulator (parameter 001) Start stitch condensing On; number of stitches without stitch regulator (parameter 000), after that number of stitches with stitch regulator (parameter 001) Start stitch condensing Off	LED 1 On LED 2 On both LEDs Off	S2 key

Function <b>with</b> control panel		V810/V820
Single start backtack Double start backtack Start backtack Off	lefthand arrow above key On righthand arrow above key On both arrows Off	1 key
Start stitch condensing On; number of stitches with stitch regulator (parameter 001) Start stitch condensing On; number of stitches without stitch regulator (parameter 000), after that number of stitches with stitch regulator (parameter 001) Start stitch condensing Off	lefthand arrow above key On righthand arrow above key On both arrows Off	1 key

The start backtack/start stitch condensing starts by pressing the pedal forward at the beginning of the seam. From lifted sewing foot the backtack is delayed by the time t3 (start delay after switching off the sewing foot lift signal). Start backtack as well as start stitch condensing are executed automatically at speed n3. They cannot be interrupted. If softstart is running parallel, the respective lower speed is prevailing.

If backtack synchronization (parameter 298) is off, the stitch regulator will be synchronized to position 1.

The stitch regulator will be switched off after completion of the stitch count (parameter 001) and the speed n3 after a delay time t1. Then pedal control is returned.

Counting is synchronized to position 1.

### 9.4.1 Speed n3 at the Start of the Seam

Function <b>with</b> or <b>without</b> control panel		Parameter
Start backtack/start stitch condensing speed	(n3)	<b>112</b>

When programming 3-digit or 4-digit parameter values on the control, the 2-digit or 3-digit values displayed must be multiplied by 10.

### 9.4.2 Stitch Counting for Start Backtack/Start Stitch Condensing

Function <b>with</b> or <b>without</b> control panel		Parameter
Number of stitches forward or without stitch regulator	(c2)	<b>000</b>
Number of stitches backward or with stitch regulator	(c1)	<b>001</b>

The start backtack/start stitch condensing stitches with or without stitch regulator can be programmed and varied by means of the above parameters directly on the control or on a connected V810/V820 control panel.

For fast operator information (HIT) when using the V820 control panel, the value of the function switched on by means of the **1** key can be displayed for approx. 3 seconds. During this time, the value can be varied directly by pressing the + or - key.

### 9.4.3 Stitch Correction and Speed Release

Function <b>with</b> or <b>without</b> control panel		Parameter
Stitch correction time	(t8)	<b>150</b>
Delay until speed release after start backtack	(t1)	<b>200</b>

Speed release after single and double backtack can be influenced by parameter 200.

In the case of slow backtack mechanisms it is possible to delay disabling of the stitch regulator in the single and double start backtack by the time t8 (start backtack stitch correction) and thereby prolong the backward section. This time-lag can be selected by means of parameter 150.

### 9.4.4 Double Start Backtack

The forward section will be sewn for a number of stitches that can be set. Then the stitch regulator signal will be issued and the backward section will be executed. The number of stitches for the two sections can be set separately.

### 9.4.5 Single Start Backtack / Start Stitch Condensing

The stitch regulator signal will be issued and the backward section and/or start stitch condensing will be executed for a number of stitches that can be set.

## 9.5 End Backtack / End Stitch Condensing

Function <b>without</b> control panel		Control
Single end backtack Double end backtack End backtack Off	LED 3 On LED 4 On both LEDs Off	S3 key
End stitch condensing On; number of stitches with stitch regulator (parameter 002) End stitch condensing On; number of stitches with stitch regulator (parameter 002), after that number of stitches without stitch regulator (parameter 003) End stitch condensing Off	LED 3 On LED 4 On both LEDs Off	S3 key

Function <b>with</b> control panel		V810	V820
Single end backtack Double end backtack End backtack Off	lefthand arrow above key On righthand arrow above key On both arrows Off	2 key	4 key
End stitch condensing On; number of stitches with stitch regulator (parameter 002) End stitch condensing On; number of stitches with stitch regulator (parameter 002), after that number of stitches without stitch regulator (parameter 003) End stitch condensing Off	lefthand arrow above key On righthand arrow above key On both arrows Off	2 key	4 key

The end backtack/end stitch condensing in a seam with stitch counting starts by heelback at the end of counting, or, from the light barrier seam at the end of the light barrier compensating stitches. The stitch regulator is immediately enabled from machine standstill. After lowering the sewing foot, the switch-on point of the stitch regulator is delayed by the time t3 (start delay after switching off the sewing foot lift signal). The first leading edge of position 1 counts as 0 stitch whenever the function is not started in position 1. If backtack synchronization (parameter 298) is not switched on, the stitch regulator is synchronized to position 1.

End backtack as well as end stitch condensing are performed automatically at speed n4. They cannot be interrupted.

From full machine run, end stitch condensing will be switched in only after having reached the speed n4 and synchronization to position 2.

### 9.5.1 Speed n4 at the Seam End

Function <b>with</b> or <b>without</b> control panel	Parameter
End backtack/end stitch condensing speed (n4)	<b>113</b>

When programming 3-digit or 4-digit parameter values on the control, the 2-digit or 3-digit values displayed must be multiplied by 10.

### 9.5.2 Stitch Counting for End Backtack/End Stitch Condensing

Function <b>with</b> or <b>without</b> control panel	Parameter
Number of stitches forward or without stitch regulator (c3)	<b>002</b>
Number of stitches backward or with stitch regulator (c4)	<b>003</b>

The end backtack/end stitch condensing stitches with or without stitch regulator can be programmed and varied by means of the above parameters directly on the control or on a connected V810/V820 control panel.

For fast operator information (HIT) when using the V820 control panel, the value of the function switched on by means of the **4** key can be displayed for approx. 3 seconds. During this time, the value can be varied directly by pressing the + or - key.

### 9.5.3 Stitch Correction and Last Stitch Backward

Function <b>with</b> or <b>without</b> control panel	Parameter
Last stitch backward On/Off (FAr)	<b>136</b>
Stitch correction time (c9)	<b>151</b>

The backtack solenoid can be delayed in the double end backtack by selecting a stitch correction time (t9) by means of parameter 151.

For some sewing procedures it is desirable that the backtack solenoid in the single end backtack is disabled only after trimming. This function can be selected by means of parameter 136.

**Parameter 136 = 0** trimming stitch forward  
**Parameter 136 = 1** trimming stitch backward in the single end backtack  
**Parameter 136 = 2** trimming stitch or positioning stitch always backward at the seam end  
**(only with program 1466)**

### 9.5.4 Double End Backtack/End Stitch Condensing

The backward section and/or end stitch condensing will be executed for a number of stitches that can be set. Then the stitch regulator will be disabled and the forward section and/or normal stitch condensing stitches will be executed. The number of stitches for the two sections can be set separately.

After stitch counting (parameter 003) the trimming function will be initiated. During the entire operation the sewing speed is reduced to speed n4, with the exception of the last stitch, which will be performed at positioning speed n1.

In the case of slow backtack mechanisms it is possible to delay disabling of the stitch regulator in the single and double end backtack by the time t9 (end backtack stitch correction).

### 9.5.5 Single End Backtack / End Stitch Condensing

The stitch regulator signal will be issued and the backward section and/or end stitch condensing will be executed for a number of stitches that can be set. During the last stitch the speed is reduced to positioning speed.

### 9.5.6 Backtack Synchronization

Function <b>with</b> or <b>without</b> control panel		Parameter
Backtack synchronization for start and end backtack On/Off	(nSo)	<b>298</b>
Backtack synchronization speed	(nrS)	<b>299</b>

If parameter 298 is on, the backtack speed will be switched to backtack synchronization speed one stitch before engaging and disengaging of the backtack solenoid. The backtack speed is released at the next position 2. If the synchronization speed that can be set by means of parameter 299 is higher than the backtack speed, the latter is maintained. Backtack synchronization is possible in the start and end backtack.

The letter symbols in parentheses ( ) are visible only if the V820 control panel is connected!

### 9.6 Start Ornamental Backtack/Stitch Condensing

Function <b>without</b> control panel		Control
Function "ornamental backtack" On/Off		<b>135</b>
Ornamental backtack stop time		<b>210</b>
Single start ornamental backtack	LED 1 On	S2 key
Double start ornamental backtack	LED 2 On	
Start ornamental backtack Off	both LEDs Off	

Function <b>with</b> control panel		V810/V820
Function "ornamental backtack" On/Off	(SrS)	<b>135</b>
Ornamental backtack stop time	(tSr)	<b>210</b>
Single start ornamental backtack	lefthand arrow above key On	1 key
Double start ornamental backtack	righthand arrow above key On	
Start ornamental backtack Off	both arrows Off	

The parameters of the start backtack speed and the backtack stitches forward and backward are identical with the standard start backtack.

**Difference from the standard start backtack:**

- The drive stops for stitch regulator switching
- The stop time can be set

**When using the V820 control panel, direct access by means of the function key (9 key) is possible!**

Function <b>with</b> control panel		Parameter
Ornamental backtack On/Off	(-F-)	<b>008 = 2</b>

### 9.7 End Ornamental Backtack/Stitch Condensing

Function <b>without</b> control panel		Control
Function "ornamental backtack" On/Off		<b>135</b>
Ornamental backtack stop time		<b>210</b>
Single end ornamental backtack	LED 3 On	S3 key
Double end ornamental backtack	LED 4 On	
End ornamental backtack Off	both LEDs Off	

Function <b>with</b> control panel		V810	V820
Function "ornamental backtack" On/Off	(SrS)	<b>135</b>	<b>135</b>
Ornamental backtack stop time	(tSr)	<b>210</b>	<b>210</b>
Single end ornamental backtack	lefthand arrow above key On	2 key	4 key
Double end ornamental backtack	righthand arrow above key On		
End ornamental backtack Off	both arrows Off		

The parameters of the end backtack speed and the backtack stitches forward / backward are identical with the standard end backtack.

#### Difference from the standard end backtack:

- The drive stops for stitch regulator switching
- The stop time can be set

**When using the V820 control panel, direct access by means of the function key (9 key) is possible!**

Function <b>with</b> control panel		Parameter
Ornamental backtack On/Off	(-F-)	<b>008 = 2</b>

## 9.8 Intermediate Backtack

Upon pressing an external key according to the preselection of parameters 240...249, the backtack solenoid can be switched on anywhere in the seam and at standstill.

See List of Parameters chapter **Connection Diagram!**

## 9.9 Stitch Regulator Suppression/Recall

### Effective in standard and ornamental backtack

The next backtack and/or stitch condensing operation can be suppressed or recalled once by pressing an external key according to the preselection of parameters 240...249.

Upon pressing	Start backtack/ Stitch condensing On	Start backtack/ Stitch condensing Off	End backtack/ Stitch condensing On	End backtack/ Stitch condensing Off
Before start of seam	No backtack/ Stitch condensing	Backtack/ Stitch condensing	---	---
In the seam	---	---	No backtack/ Stitch condensing	Backtack/ Stitch condensing

The double backtack is performed in the above cases.

See List of Parameters chapter **Connection Diagram!**

## 9.10 Holding Power of the Stitch Regulator Solenoid

Function <b>with</b> or <b>without</b> control panel		Parameter
Time of full power	(t10)	<b>212</b>
Holding power of the stitch regulator solenoid	(t11)	<b>213</b>

The stitch regulator solenoid is engaged by full power. Then the system switches automatically to partial power in order to reduce the load for the control and the connected solenoid. Set the duration of full power by means of parameter 203 and the partial holding power by means of parameter 204.



**CAUTION!**

If the holding power is set too high, the solenoid and the control may be permanently damaged. Please observe the permissible duty ratio (ED) of the solenoid and set the appropriate value according to the table below.

Stage	Duty ratio (ED)	Effect
1	12.5 %	low holding power
2	25.0 %	
3	37.5%	
4	50.0%	
5	62.5%	
6	75.0%	
7	87.5%	
0	100.0%	high holding power (full power)

### 9.11 Reverse Motor Rotation

Function <b>with</b> or <b>without</b> control panel	Parameter
Positioning speed (n1)	<b>110</b>
Number of reversing increments (ird)	<b>180</b>
Switch-on delay of reverse motor rotation (drd)	<b>181</b>
Reverse motor rotation On/Off (Frd)	<b>182</b>

The function "reverse motor rotation" is performed after trimming. When the stop position is reached, the drive stops for the duration of the switch-on delay of reverse motor rotation. Then it runs in reverse direction at positioning speed for a number of increments that can be set. 1 increment corresponds to approx. 3°.

### 9.12 Unlocking the Chain (Mode 4/5/6/7/16)

Function <b>with</b> or <b>without</b> control panel	Parameter
Number of run-out stitches upon unlocking the chain (c6)	<b>184</b>
Function "unlock the chain" in modes 4, 5, 6, 7 and 16 (MEk)	<b>190</b>

Upon unlocking the chain at the seam end, the functions **backtacking**, **chain suction**, **thread trimming** and **tape cutter/fast scissors** are automatically suppressed. If, however, parameter 190 = 3, the function **tape cutter/fast scissors** is possible. After pressing the key "unlocking the chain" and with pedal in position 0 (neutral), the drive always stops in position 1.

**Settings necessary for the operation "unlocking the chain":**

- Set "unlock the chain" by means of parameter 190 = 1 / 2 / 3 / 4 (190 = 0 "unlock the chain" off)
- Set **switch-on delay** by means of parameter 181 and **reversing angle** by means of parameter 180
- Determine the **function of the key "unlock the chain"** by means of one of the parameters 240...249
- If parameter 290 is set at "7", a switch at the input i1...i10 must be closed and programmed to "18".
- If parameter 290 is set at "16", the function "unlock the chain" must be switched on corresponding to slide-in strip 7 by means of the 8 key on the V820 control panel.

**Parameter 190 = 0: Unlocking the chain Off**

**Parameter 190 = 1: Sequence with pedal in position -2 from machine run or from position 2:**

- Press key "unlock the chain"
- Run at positioning speed to position 1
- Sequence of reversing angle at positioning speed after a switch-on delay that can be set

**Parameter 190 = 1: Sequence with pedal in position -2 from standstill in position 1:**

- Press key "unlock the chain"
- Sequence of reversing angle at positioning speed after a switch-on delay that can be set

- Parameter 190 = 2: Automatic sequence with light barrier at the seam end without tape cutting / pedal in position -2 according to the setting of parameter 019:**
- Press key "unlock the chain"
  - Run to position 1 after light barrier sensing
  - Sequence of reversing angle at positioning speed after a switch-on delay that can be set
- Parameter 190 = 3 Automatic sequence with light barrier at the seam end with tape cutting and run-out stitches (only possible in modes 7 and 16 and if parameter 018 = OFF):**
- Press key "unlock the chain"
  - After light barrier sensing, execution of compensating stitches and end counting until tape cutting
  - Run-out stitches until unlocking the chain can be set by means of parameter 184
  - Sequence of reversing angle at positioning speed after a switch-on delay that can be set
- Parameter 190 = 4: Sequence with pedal in position -2 / no unlocking of the chain if seam end with light barrier, cutting and run-out stitches are set:**
- Press pedal to position -2
  - Run at positioning speed to position 1
  - Sequence of reversing angle at positioning speed after a switch-on delay that can be set
  - No unlocking of the chain at the seam end with light barrier
  - Reverse motor rotation is suppressed when the drive stops. The signals "stacker", M2 and "sewing foot lift" will be issued.

If parameter **290 = 16** and slide-in strip "7" has been selected for the V820 control panel, the following functions will be performed:

Function <b>with</b> V820 control panel	7 key	8 key
Standard sequence with tape cutting at the start of the seam and at the seam end	<b>Off</b>	<b>Off</b>
Unlocking the chain On according to the setting of parameter 190 = 0...4	<b>On</b>	<b>Off</b>
Unlocking the chain according to the setting of parameter 190 = 4	<b>On/Off</b>	<b>On</b>

See timing diagrams in the List of Parameters for operation characteristics of the control.

**When using the V820 control panel, direct access by means of the function key (9 key) is possible!**

Function <b>with</b> control panel		Parameter
Unlocking the chain On/Off	(-F-)	<b>008 = 4</b>

### 9.13 Machine Run Blockage (Safety Switch)



#### **CAUTION!**


This is not a safety function. The line voltage must still be switched off during maintenance and repair work.

The function "machine run blockage" is enabled by connecting a switch to socket ST2 or B4, depending on the preselection of parameters 240...249. When using a V810 / V820 control panel, an acoustic signal can be switched on and/or off by means of parameter 127.

**Display after enabling machine run blockage without control panel:**

Control display

→

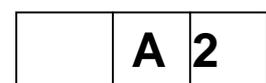

**Display and signal after enabling machine run blockage with control panel:**

V810 control panel display

(symbol blinks and acoustic signal if parameter 127 = ON)

→



V820 control panel display  
(symbol blinks and acoustic signal if parameter 127 = ON)



**Machine run blockage in the free seam, seam with stitch counting and light barrier seam:**

The seam is suspended by opening and/or closing the switch.

- Stop in the basic position
- Needle up is not possible
- Sewing foot lift is possible

**Machine run blockage in the start backtack / start stitch condensing:**

The start backtack / start stitch condensing is interrupted by opening and/or closing the switch.

- Stop in the basic position
- Needle up is not possible
- Sewing foot lift is possible
- After disabling of the machine run blockage, the seam will be continued with the section following the start backtack / start stitch condensing

**Machine run blockage in the end backtack / end stitch condensing:**

The end backtack / end stitch condensing is interrupted, and the seam is completed by opening and/or closing the switch.

- Sewing foot lift is possible

**New start after machine run blockage**

Function <b>with</b> or <b>without</b> control panel	Parameter
New start after machine run blockage (Pdo)	<b>234</b>

Parameter 234 determines how a new start is possible after closing and/or opening the switch.

**Parameter 234 = OFF** New start after disabling machine run blockage without influence by the pedal. This setting is applicable, for example, to automats.

**Parameter 234 = ON** New start after disabling machine run blockage only if the pedal is in position 0 (neutral).

**9.14 High Lift for Walking Foot Signal Output M6 / Flip-Flop 1**

Function <b>with</b> or <b>without</b> control panel	Parameter
High lift for walking foot On/Off (hP)	<b>137</b>

High lift for walking foot is effective only if input function 13 or 14 has been selected by means of parameters 240...249 and parameter 137 = ON. With all other settings high lift for walking foot is ineffective. The signal “machine at standstill” is issued at the corresponding output (M6).

**9.14.1 High Lift Walking Speed**

Function <b>with</b> or <b>without</b> control panel	Parameter
High lift walking speed (n10)	<b>117</b>

**9.14.2 High Lift Walking Speed Run-Out Time**

Function <b>with</b> or <b>without</b> control panel	Parameter
High lift walking speed run-out time (thP)	<b>152</b>

### 9.14.3 High Lift Walking Stitches

Function <b>with</b> or <b>without</b> control panel	Parameter
Number of high lift walking stitches (chP)	<b>185</b>

Upon pressing the external key “high lift for walking foot” depending on the setting of parameters 240...249, the speed is limited to high lift walking speed. The solenoid for high lift for walking foot is switched on if the speed  $\leq$  high lift walking speed. It is possible to program run-out stitches by means of parameter 185. This way, high lift for walking foot remains on until stitch counting has been completed. The speed limitation remains effective during run-out time after the solenoid for high lift for walking foot has been switched off.

### 9.14.4 High Lift for Walking Foot Operational Mode Not Stored (Parameters 240...249 = 13)

**The following function is performed if "0" run-out stitches have been programmed by means of parameter 185:**

- Press key “high lift for walking foot”; signal “high lift for walking foot” is On.
- Release key “high lift for walking foot”; signal “high lift for walking foot” turns off.

**The following function is performed if ">0" run-out stitches have been programmed by means of parameter 185:**

- 1. Press key “high lift for walking foot” at drive standstill; signal “high lift for walking foot” is On and remains On after releasing the key.
- 2. Press key “high lift for walking foot” at drive standstill; signal “high lift for walking foot” remains On and turns off after releasing the key.

If the signal “high lift for walking foot” is On when starting the drive, the speed will be limited. The signal turns off after the run-out stitches have been executed, and the speed limitation will be disabled after the run-out time (parameter 152).

**While the drive is running, if ">0" run-out stitches have been programmed by means of parameter 185:**

- Press key “high lift for walking foot” while drive is running; signal “high lift for walking foot” and high lift walking speed are On.
- Release key “high lift for walking foot” while drive is running; signal “high lift for walking foot” turns off after the run-out stitches have been executed, and the speed limitation will be disabled after the run-out time (parameter 152).

### 9.14.5 High Lift for Walking Foot Operational Mode Stored /Flip-Flop 1 (Parameters 240...249 = 14)

- 1. Press key “high lift for walking foot” while drive is running; signal “high lift for walking foot” and high lift walking speed are On.
- 2. Press key “high lift for walking foot” while drive is running; signal “high lift for walking foot” turns off immediately, and the speed limitation will be disabled after the run-out time (parameter 152).

## 9.15 Speed Limitation n9

Function <b>with</b> or <b>without</b> control panel	Parameter
Speed limitation n9 (n9)	<b>122</b>

If parameters 240...249 = 23, a speed limitation n9 will be switched on upon pressing an external key.

## 9.16 Speed Limitation n11 with Signal Output M10 / Flip-Flop 2

Function <b>with</b> or <b>without</b> control panel		Parameter
Speed limitation n11	(n11)	<b>123</b>
Disabling of flip-flop functions at the seam end On/Off	(FFm)	<b>183</b>
Function "speed limitation n11" inverted/non-inverted	(FFi)	<b>186</b>
Function of signal M10 on socket ST2/29 after "power on"	(FFo)	<b>187</b>

The speed limitation can be switched on by pressing a key on any of the inputs in1...i10 and switched off by pressing the key again. A signal output which can be programmed individually (inverted/non-inverted) is provided for the speed limitation. Furthermore, the function of signal output M10 can be determined after "power on".

### Settings necessary for speed limitation n11

- Assign the function "speed limitation n11" to a key by means of one of the parameters 240...249 = 22. This function has a flip-flop effect.
- Determine by means of **parameter 186** whether signal M10 for speed limitation n11 is inverted or non inverted.  
**Parameter 186 = OFF** Speed limitation n11 On/Signal M10 On or Speed limitation n11 Off/Signal M10 Off.  
**Parameter 186 = ON** Speed limitation n11 Off/Signal M10 On or Speed limitation n11 On/Signal M10 Off.
- Determine by means of **parameter 187** whether signal M10 is issued at socket ST2/29 after "power on".  
**Parameter 187 = OFF** Signal M10 not active after "power on"; speed limitation n11 according to setting of parameter 186 (inverted/non-inverted)  
**Parameter 187 = ON** Signal M10 active after "power on"; speed limitation n11 according to setting of parameter 186 (inverted/non-inverted)

## 9.17 Disabling of Flip-Flop Functions at the Seam End

Function <b>with</b> or <b>without</b> control panel		Parameter
Disabling of flip-flop functions at the seam end On/Off	(FFm)	<b>183</b>

Determine by means of parameter 183 whether signals M6 and/or M10 shall be switched off at the seam end. If 183 = 0, the signals can be switched off only by means of the appropriate keys.

**Parameter 183 = 0** Signal M6 (flip-flop 1) and signal M10 (flip-flop 2) are not switched off at the seam end.

**Parameter 183 = 1** Signal M6 (flip-flop 1) is switched off at the seam end.

**Parameter 183 = 2** Signal M10 (flip-flop 2) is switched off at the seam end.

**Parameter 183 = 3** Signal M6 (flip-flop 1) and signal M10 (flip-flop 2) are switched off at the seam end.

## 9.18 Bobbin Thread Monitor (Only with Program 1466)

Function <b>with</b> or <b>without</b> control panel		Parameter
Bobbin thread monitor 0 = Off / 1 = with stop / 2 = without stop / 3 = with stop and start blockage after thread trimming	(rFw)	<b>030</b>
Number of bobbin thread monitor stitches	(cFw)	<b>031</b>

For bobbin thread monitor operation a number of stitches depending on the length of the bobbin thread is preset by means of parameter 031. After the execution of these stitches the drive stops and a visual signal appears on the display. If a control panel is connected, an acoustic signal is also issued if parameter 127 is set accordingly. This signals that the bobbin thread will run out. After pressing the pedal again, the seam can be continued and the thread can be trimmed. After inserting a full bobbin and pressing the ENTER key, a new sewing operation can be started.

### Enable bobbin thread monitor:

- Set parameter 030 to "1...3".
- Input the desired maximum number of stitches in parameter 031 (input value x 100 = number of stitches, e. g. **80 x 100 = 8000**).
- For starting the counter set the A or B key at "19" by means of parameter 293 or 294.
- When using a control panel, an acoustic signal can also be enabled by means of parameter 127.
- Start the sewing operation.

**Bobbin thread monitor in operation:**

- **Parameter 030 = 0:** Bobbin thread monitor is off.
- **Parameter 030 = 1:** The drive stops after the stitch counter has run out. The message "A7" appears on the control, and the bobbin thread monitor symbol blinks on the V810/V820 control panel, respectively. There will be an acoustic signal if a V820 is connected and parameter 127 is set at "1".
- **Parameter 030 = 2:** After the stitch counter has run out, the message "A7" appears on the control, and the bobbin thread monitor symbol blinks without stopping automatically on the V810/V820 control panel, respectively. There will be an acoustic signal if a V820 is connected.
- **Parameter 030 = 3:** The drive stops after the stitch counter has run out. Thread trimming is possible with pedal in pos. -2. The start is blocked. The message "A7" appears on the control, and the bobbin thread monitor symbol blinks on the V810/V820 control panel, respectively, and output M11 is enabled. There will be an acoustic signal if a V820 is connected and parameter 127 is set at "1".

**Getting the bobbin thread monitor ready for operation:**

- Insert a full bobbin.
- Press the selected external key, or the appropriate key on the connected control panel (8 key on the V820).
- Set counting to the value determined by parameter 031 and start it.
- The symbol stops blinking, and the message "A7" and output M11 on the control will be switched off after trimming.

**9.19 Thread Trimming Operation**

Function <b>with</b> or <b>without</b> control panel		Parameter
Thread trimmer On/Off	(FA)	<b>013</b>
Thread wiper On/Off	(FW)	<b>014</b>

Function <b>with</b> control panel	V820
Thread trimmer or thread wiper On/Off	5 key

When a V820 control panel is connected, the functions can also be switched on and off by means of the 5 key.

**9.19.1 Thread Trimmer/Thread Wiper (Modes 0, 1, 2, 3, 10, 13, 14, 19, 20 and 22)**

Function <b>with</b> or <b>without</b> control panel		Parameter
Thread trimming stop depending on angle (only if parameter 290 = 20)	(dr°)	<b>197</b>
Thread wiper time	(t6)	<b>205</b>
Thread trimmer activation angle	(iFA)	<b>250</b>
Thread tension release switch-off delay	(FSA)	<b>251</b>
Thread tension release switch-on delay	(FSE)	<b>252</b>
Stop time for thread trimmer	(tFA)	<b>253</b>
Holding power output stitch condensing of the thread trimmer backward	(tAM)	<b>254</b>

Thread trimming on lockstitch machines (modes 0...3, 10, 13, 14, 19, 20 and 22) is performed at trimming speed. When thread trimming is off, the drive stops in position 2 at the seam end; it stops in position 1 at the end of programmed seams. On lockstitch machines, the thread wiper ON period can be set depending on the selected trimming mode (see chapter "Timing Diagrams" in the List of Parameters). The return time (t7) that can be set by means of parameter 206 prevents sewing foot lifting before the thread wiper is in its initial position. If the thread wiper is not connected, there will be a delay time (tFL) after thread trimming until sewing foot lifting.

**9.19.2 Trimming Speed**

Function <b>with</b> or <b>without</b> control panel		Parameter
Trimming speed	(n7)	<b>116</b>

### 9.19.3 Chainstitch Thread Trimmer (Modes 4, 5, 6, 17 and 21)

Thread trimming on chainstitch machines (modes 4, 5, 6, 17 and 21) is performed at machine standstill in position 2. When thread trimming is off, the drive stops in position 2 at the seam end. The signal sequence of M1...M4 and of the sewing foot can be set as desired by means of parameters 280...288 (parallel or sequential).

### 9.19.4 Chainstitch Machine Trimming Signal Times

Signal delay times and ON periods can be set with the help of the following parameters.

Function <b>with</b> or <b>without</b> control panel		Parameter
Thread trimming stop depending on angle (only if parameter 290 = 17)	(dr°)	<b>197</b>
Delay time output M1	(kd1)	<b>280</b>
ON period output M1	(kt1)	<b>281</b>
Delay time output M2	(kd2)	<b>282</b>
ON period output M2	(kt2)	<b>283</b>
Delay time output M3	(kd3)	<b>284</b>
ON period output M3	(kt3)	<b>285</b>
Delay time output M4	(kd4)	<b>286</b>
ON period output M4	(kt4)	<b>287</b>
Delay time until sewing foot On	(kdF)	<b>288</b>
ON period output M7 (signal if parameter 290 = 16)	(kt5)	<b>289</b>

See timing diagrams in the List of Parameters for operation characteristics of the control. See also chapter "Selection of Functional Sequences (Thread Trimming Operations)".

### 9.20 Stitch Lock Machine Functions (Mode 21)

Function <b>with</b> or <b>without</b> control panel		Parameter
Stitch lock function On/Off	(StL)	<b>196</b>

The following settings are possible using parameter 196:

**Parameter 196 = 0** The stitch lock function is off. Output ST2/34 operates as stitch condensing.

**Parameter 196 = 1** The stitch lock function is on. Output ST2/34 operates as stitch lock and output ST2/28 (M2) as stitch condensing. **Note that the output functions have been switched! Pay particular attention when connecting a different sewing machine!**

The corresponding values are set automatically in mode 21! See table in chapter "Preset Values Depending on Mode".

### 9.21 Overlock Machine Functions (Mode 7)

#### 9.21.1 Chain Suction Signal

The chain suction signal can be preselected for start and end counting, respectively, by means of the **S2** key on the control and the **1** key on the V810/V820 control panel. If chain suction and tape cutter are switched off at the start of the seam, the respective counts will be suppressed. But they will be performed at the seam end.

Function <b>without</b> control panel		Control
<b>Chain suction</b> at the start of the seam On	LED 1 On	S2 key
<b>Chain suction</b> at the seam end On	LED 2 On	

Function <b>with</b> control panel		V810/V820
<b>Chain suction</b> at the start of the seam On	lefthand arrow above key On	1 key
<b>Chain suction</b> at the seam end On	righthand arrow above key On	

Function <b>with</b> or <b>without</b> control panel		Parameter
Sequence overlock mode (modes 7/16) with or without stop	(UoS)	<b>018</b>
Chain suction signal at the seam end until end of count c2 or until pedal in pos.0 (neutral)	(SPO)	<b>022</b>
Speed during stitch counting at the start of the seam	(kSA)	<b>143</b>
Speed during stitch counting at the seam end	(kSE)	<b>144</b>
Enable chain suction and thread tension release signal at the seam end	(kSL)	<b>193</b>

There are various setting possibilities with the following parameters in the overlock mode (mode 7).

- Parameter 018 = OFF** Sequence with stop.  
**Parameter 018 = ON** Sequence without automatic stop at the seam end. Parameter 022 must be set at ON.  
**Parameter 022 = OFF** The chain suction signal at the seam end is disabled after count c2.  
**Parameter 022 = ON** The chain suction signal at the seam end remains on until pedal in pos. 0 (neutral).  
**Parameter 193 = OFF** Thread tension release and chain suction after the light barrier compensating stitches.  
**Parameter 193 = ON** Chain suction from light barrier uncovered onwards and thread tension release after the light barrier compensating stitches.

It is possible to select the speed function during stitch counting at the start of the seam and at the seam end by means of the following parameters.

- Parameter 143 = 0** Fixed speed n3 (parameter 112) at the start of the seam.  
**Parameter 143 = 1** Pedal controlled speed at the start of the seam.  
**Parameter 144 = 0** Fixed speed n4 (parameter 113) at the seam end.  
**Parameter 144 = 1** Pedal controlled speed at the seam end.

### 9.21.2 Start and End Counts

Function <b>with</b> or <b>without</b> control panel		Parameter
End count (c2) at limited speed n4 until stop	(c2)	<b>000</b>
Start count (c1) at limited speed n3 for chain suction	(c1)	<b>001</b>
Count (c3) tape cutter at the start of the seam	(c3)	<b>002</b>
End count (c4) for tape cutter at the seam end	(c4)	<b>003</b>
Stitch counting speed at the start of the seam	(n3)	<b>112</b>
Stitch counting speed at the seam end	(n4)	<b>113</b>
Seam end in mode 7 through end count (c2) or (c4)	(mhE)	<b>191</b>

The following settings are possible for determining the seam end by means of parameter 191:

- Parameter 191 = 0** Seam end after count c4 (tape cutter)  
**Parameter 191 = 1** Seam end after count c2 (chain suction)

### 9.22 Function of Output Signal M8

Function <b>with</b> or <b>without</b> control panel		Parameter
Delay time for signal M8 (only if parameter 290 = 16)	(Ad1)	<b>274</b>
ON period for signal M8 (only if parameter 290 = 16)	(At1)	<b>275</b>
Functions of signal M8	(m08)	<b>296</b>

The following settings are possible using parameter 296:

- Parameter 296 = 0** Function signal M8 Off  
**Parameter 296 = 1** Signal M8 “hemmer foot” is On at the start of the seam with pedal in pos. <0 and in the seam with signal “machine running”.  
**Parameter 296 = 2** Signal M8 “hemmer foot” is On at the start of the seam with pedal in pos. <0 and always in the seam.  
**Parameter 296 = 3** Signal M8 enabled as “center cutter”.  
**Parameter 296 = 4** Signal M8 is On with “needle up / down”.  
**Parameter 296 = 5** Signal M8 alternates with M3 when set as “fast scissors“ on overlock machines (parameter 290 = 16 and parameter 232 = 1).

### 9.23 Function of Output Signal M11

Function <b>with</b> or <b>without</b> control panel	Parameter
Functions of signal M11	(m11) <b>297</b>

The following settings are possible using parameter 297:

- Parameter 297 = 0** Function according to setting of parameter 290
- Parameter 297 = 1** Signal M11 is On whenever the light barrier is uncovered.
- Parameter 297 = 2** Signal M11 is On whenever the light barrier is covered.
- Parameter 297 = 3** Signal M11 is On only after light barrier uncovered or covered until seam end.
- Parameter 297 = 4** Signal M11 is On as with setting 3. Signal M5 (machine running), however, is Off while signal M11 is On.
- Parameter 297 = 5** Signal M11 is On whenever the pedal is in pos. -2 or the key "signal 'hemmer foot off'" is pressed or the light barrier is sensed.

### 9.24 Tape Cutter/Fast Scissors (Modes 6/7/16)

#### 9.24.1 Functions for Mode 6

The signal **tape cutter/fast scissors** is issued only at the seam end. A manual tape cutter/fast scissors can also be set. See also chapter "Manual Tape Cutter/Fast Scissors".

Function <b>with</b> or <b>without</b> control panel	Parameter
<b>Tape cutter</b> at the seam end On/Off	<b>014</b>

#### Output and Times for Tape Cutter

Function <b>with</b> or <b>without</b> control panel	Parameter
Delay time for output M3 (ST2/27) <b>tape cutter</b> AH (kd3)	<b>284</b>
ON period for output M3 (ST2/27) <b>tape cutter</b> AH (kt3)	<b>285</b>

- Parameter **232** must be set at "OFF".
- The delay time for the tape cutter is usually set at "0".

#### Output and Times for Fast Scissors

Function <b>with</b> or <b>without</b> control panel	Parameter
Delay time for output M3 (ST2/27) <b>fast scissors</b> AH1 (kd3)	<b>284</b>
ON period for output M3 (ST2/27) <b>fast scissors</b> AH1 (kt3)	<b>285</b>
Delay time for output M4 (ST2/36) <b>fast scissors</b> AH2 (kd4)	<b>286</b>
ON period for output M4 (ST2/36) <b>fast scissors</b> AH2 (kt4)	<b>287</b>

- Parameter **232** must be set at "ON".
- The delay times for "fast scissors" are usually set at "0".

#### 9.24.2 Functions for Mode 7

The signal **tape cutter/fast scissors** can be set separately for start and end counting. See also chapter "Manual Tape Cutter/Fast Scissors".

Function <b>without</b> control panel	Control
<b>Tape cutter/Fast scissors</b> at the start of the seam On	LED 3 On
<b>Tape cutter/Fast scissors</b> at the seam end On	LED 4 On
<b>Tape cutter/Fast scissors</b> at the start and at the end of the seam On	LED 3 and 4 On
<b>Tape cutter/Fast scissors</b> at the start and at the end of the seam Off	LED 3 and 4 Off

S3 key

- When using the V810 control panel, parameter 291 will automatically be set to slide-in strip "7" if 290 = 7.
- When using the V820 control panel, parameter 292 will automatically be set to slide-in strip "5" if 290 = 7.

Function <b>with</b> control panel	V810	V820
<b>Tape cutter/Fast scissors</b> at the start of the seam On	lefthand arrow above key On	4 key
<b>Tape cutter/Fast scissors</b> at the seam end On	righthand arrow above key On	4 key
<b>Tape cutter/Fast scissors</b> at the start and at the end of the seam On	both arrows above key On	
<b>Tape cutter/Fast scissors</b> at the start and at the end of the seam Off	both arrows above key Off	

The tape cutter signal can be influenced by parameter 020 in such a way that the signal remains on at the seam end and is off when you start sewing again after some run-out stitches, which can be set by means of parameter 021. This action serves as clamp.

Function <b>with</b> or <b>without</b> control panel		Parameter
Clamp at the seam end (output ST2/27) On/Off (mode 7)	(kLm)	<b>020</b>
Run-out stitches (ckL) of the clamp at the start of the seam (mode 7)	(ckL)	<b>021</b>

### Output and Times for Tape Cutter

Function <b>with</b> or <b>without</b> control panel		Parameter
Delay time for output M3 (ST2/27) <b>tape cutter</b> AH	(kd3)	<b>284</b>
ON period for output M3 (ST2/27) <b>tape cutter</b> AH	(kt3)	<b>285</b>

- Parameter **232** must be set at "OFF".
- The delay time for the tape cutter is usually set at "0".

### Output and Times for Fast Scissors

Function <b>with</b> or <b>without</b> control panel		Parameter
Delay time for output M3 (ST2/27) <b>fast scissors</b> AH1	(kd3)	<b>284</b>
ON period for output M3 (ST2/27) <b>fast scissors</b> AH1	(kt3)	<b>285</b>
Delay time for output M4 (ST2/36) <b>fast scissors</b> AH2	(kd4)	<b>286</b>
ON period for output M4 (ST2/36) <b>fast scissors</b> AH2	(kt4)	<b>287</b>

- Parameter **232** must be set at "ON".
- The delay times for "fast scissors" are usually set at "0".

## 9.24.3 Functions for Mode 16

Function <b>without</b> control panel		Parameter
Count c1 On/Off	LED 1/2	S2 key
Counts c3 and c4 On/Off	LED 3/4	S3 key
Functions of sewing foot lifting On/Off	LED 5/6	S4 key
Basic position 1 or 2	LED 7/8	S5 key

- The signal **tape cutter/fast scissors** can be set separately for start and end counting.
- The V810 control panel cannot be used if parameter 290 = 16 (mode 16).
- When using the V820 control panel, parameter 292 will automatically be set to slide-in strip "7" if 290 = 16.

Function <b>with</b> control panel	V820
Tape cutter/Fast scissors at the start of the seam On/Off	1 key
Tape cutter/Fast scissors at the seam end On/Off	2 key
Light barrier On/Off	3 key
Chain suction On/Off	4 key
Blow fabric onto stack from light barrier uncovered onwards On/Off	5 key
Tape cutting at the seam end On/Off	6 key
Reverse motor rotation On/Off	7 key
Unlocking the chain On/Off	8 key
Sewing foot in the seam and/or at the seam end On/Off	9 key
Basic position 1 or 2	0 key

The **7** and **8** key settings on the V820 control panel have priority over the setting of parameter 019.

Functions	2 key	6 key
Tape cutting at the seam end Off, count c4 until stop	Off	Off
Tape cutting at the seam end On, count c4 until stop	On	Off
Tape cutting at the seam end Off, count c3 until stop	On/Off	On

### Output and Times for Tape Cutter

Function <b>with</b> or <b>without</b> control panel		Parameter
Delay time for output M3 (ST2/27) <b>tape cutter</b> AH	(kd3)	<b>284</b>
ON period for output M3 (ST2/27) <b>tape cutter</b> AH	(kt3)	<b>285</b>

- Parameter **232** must be set at "**OFF**".
- The delay time for the tape cutter is usually set at "0".

### Output and Times for Fast Scissors

Function <b>with</b> or <b>without</b> control panel		Parameter
Delay time for output M3 (ST2/27) <b>fast scissors</b> AH1	(kd3)	<b>284</b>
ON period for output M3 (ST2/27) <b>fast scissors</b> AH1	(kt3)	<b>285</b>
Delay time for output M4 (ST2/36) <b>fast scissors</b> AH2	(kd4)	<b>286</b>
ON period for output M4 (ST2/36) <b>fast scissors</b> AH2	(kt4)	<b>287</b>

- Parameter **232** must be set at "**ON**".
- The delay times for "fast scissors" are usually set at "0".

### Function "Blow Fabric onto Stack"

Function <b>with</b> or <b>without</b> control panel		Parameter
Function "blow fabric onto stack" at output M7	(bLA)	<b>194</b>
ON period for output M7	(kt5)	<b>289</b>

**Parameter 194 = 0** Blow fabric onto stack (output M7) at the seam end over the time (kt5), which can be set by means of parameter 289.

**Parameter 194 = 1** Blow fabric onto stack (output M7) from light barrier uncovered to seam end; after the seam end over the time (kt5).

See also List of Parameters chapter "**Timing Diagrams**"!

## 9.25 Manual Tape Cutter/Fast Scissors

Upon pressing an external key depending on the preselection of parameters 240...249, the **tape cutter** or **fast scissors** can be enabled anywhere in the seam or at standstill.

See chapter "**Connection Diagram**" in the List of Parameters!

## 9.26 Seam with Stitch Counting

Function <b>without</b> control panel	Parameter
Stitch counting On/Off	<b>015</b>
Function <b>with</b> control panel	V820
Stitch counting On/Off	2 key

### 9.26.1 Stitches for Stitch Counting

Function <b>with</b> or <b>without</b> control panel	Parameter
Number of stitches for a seam with stitch counting (Stc)	<b>007</b>

The stitch counting stitches can be programmed and varied by means of the above parameters directly on the control or on a connected V810/V820 control panel.

For fast operator information (HIT) when using the V820 control panel, the value of the function switched on by means of the **2** key can be displayed for approx. 3 seconds. During this time, the value can be varied directly by pressing the + or - key.

### 9.26.2 Stitch Counting Speed

Function <b>with</b> or <b>without</b> control panel	Parameter
Positioning speed (n1)	<b>110</b>
Stitch counting speed (n12)	<b>118</b>
Speed mode for a seam with stitch counting (SGn)	<b>141</b>

Speed control for stitch counting can be selected by means of parameter 141.

**Parameter 141 = 0** Execution at pedal controlled speed

**Parameter 141 = 1** Execution at fixed speed n12, when pressing the pedal forward (position >1)

**Parameter 141 = 2** Execution at limited speed n12, when pressing the pedal forward (position >1)

**Parameter 141 = 3** Automatic execution at fixed speed after having pressed the pedal once. The procedure can be interrupted by "heelback (-2)".

The sewing speed is reduced in each stitch depending on the actual speed (max. 11 stitches before the end of stitch counting), in order to be able to stop exactly at the end of counting. When the light barrier is on, free sewing will be performed after stitch counting.

### 9.26.3 Seam with Stitch Counting When Light Barrier Is On

Function <b>with</b> or <b>without</b> control panel	Parameter
Light barrier On/Off (LS)	<b>009</b>
Stitch counting On/Off (StS)	<b>015</b>
Function <b>with</b> control panel	V820
Light barrier On/Off	3 key
Stitch counting On/Off	2 key

When "stitch counting and light barrier function " is set, the number of stitches will be executed first, then the light barrier will be activated.

## 9.27 Free Seam and Seam with Light Barrier

Function <b>with</b> or <b>without</b> control panel		Parameter
Positioning speed	(n1)	<b>110</b>
Upper limit of maximum speed	(n2)	<b>111</b>
Limited speed according to setting of parameter 142	(n12)	<b>118</b>
Lower limit of maximum speed	(n2_)	<b>121</b>
Speed mode free seam	(SFn)	<b>142</b>

Speed control for the free seam and the seam with light barrier can be selected by means of the speed mode.

**Parameter 142 = 0** Execution at pedal controlled speed

**Parameter 142 = 1** Execution at fixed speed n12, when pressing the pedal forward (position >1)

**Parameter 142 = 2** Execution at limited speed n12, when pressing the pedal forward (position >1)

**Parameter 141 = 3** Only for the seam with light barrier:

- Automatic execution at fixed speed after having pressed the pedal once.
- The seam end is initiated by light barrier.
- The procedure can be interrupted by heelback (-2).
- If the light barrier is not on, speed as with parameter setting 142 = 0.

When using a control panel, the maximum speed is displayed after power on and thread trimming and can be varied directly by means of the +/- keys on the control panel. The setting range lies between the values of parameters 111 and 121.

## 9.28 Light Barrier

Function <b>with</b> or <b>without</b> control panel		Parameter
Light barrier On/Off		009

Function <b>with</b> control panel		V820
Light barrier covered/uncovered On	righthand arrow above key On	3 key
Light barrier uncovered/covered On	lefthand arrow above key On	
Light barrier Off	both arrows Off	

The light barrier function at the input of socket B18/5 is active only if parameter 239 = 0.

### 9.28.1 Speed after Light Barrier Sensing

Function <b>with</b> or <b>without</b> control panel		Parameter
Speed after light barrier sensing	(n5)	<b>114</b>

### 9.28.2 General Light Barrier Functions

Function <b>with</b> or <b>without</b> control panel		Parameter
Light barrier compensating stitches	(LS)	<b>004</b>
Number of light barrier seams	(LSn)	<b>006</b>
Light barrier sensing uncovered/covered	(LSd)	<b>131</b>
Start of sewing blocked/unblocked with light barrier uncovered	(LSS)	<b>132</b>
Light barrier seam end with thread trimming On/Off	(LSE)	<b>133</b>
Speed of the light barrier compensating stitches	(PLS)	<b>192</b>

- After sensing the seam end, the compensating stitches are counted at light barrier speed.
- Suspension of the procedure with pedal in pos. 0 (neutral). Interruption of the procedure with pedal in pos. -2.
- The thread trimming operation can be disabled by means of parameter 133, regardless of the 5 key setting on the V820 control panel. Stop in the basic position.
- Programming of max. 15 light barrier seams depending on the setting of parameter 006 with stop in the basic position. Thread trimming after the last light barrier seam.

- Light barrier sensing uncovered or covered at the seam end can be selected by means of parameter 131.
- Start blockage with light barrier uncovered programmable by means of parameter 132.
- Speed selection pedal controlled / n5 during the light barrier compensating stitches by means of parameter 192.

The light barrier compensating stitches can be programmed and varied by means of the above parameters directly on the control or on a connected V810/V820 control panel.

For fast operator information (HIT) when using the V820 control panel, the value of the function switched on by means of the **3** key can be displayed for approx. 3 seconds. During this time, the value can be varied directly by pressing the + or - key.

**When using the V820 control panel, direct access by means of the function key (9 key) is possible!**

Function <b>with</b> control panel		Parameter
Start of sewing blocked with light barrier uncovered On/Off	(-F-)	<b>008 = 3</b>

### 9.28.3 Reflection Light Barrier LSM001A

#### Sensitivity setting:

Set minimum sensitivity depending on the distance between light barrier and reflection area (turn potentiometer as far as possible to the left).

- Potentiometer directly on the light barrier module

#### Mechanical orientation:

Orientation is facilitated by a visible light spot on the reflection area.

### 9.28.4 Light Barrier Monitoring

Function <b>with</b> or <b>without</b> control panel		Parameter
Stitches for light barrier monitoring	(LSc)	<b>195</b>

In order to check the optical and electrical function it is possible to select a number of stitches by means of parameter 195. While these stitches are performed, the light barrier must be activated at least once. When the count is completed and the light barrier has not been activated, the drive stops and the message A6 appears.

- Select a number of stitches that is larger than necessary for the seam.
- The function is off if the number of stitches is "0".

### 9.28.5 Automatic Start Controlled by Light Barrier

Function <b>with</b> or <b>without</b> control panel		Parameter
Delay of automatic start	(ASd)	<b>128</b>
Automatic start On/Off	(ALS)	<b>129</b>
Light barrier sensing uncovered	(LSd)	<b>131</b>
Start of sewing blocked with light barrier uncovered	(LSS)	<b>132</b>

This function enables an automatic start of the sewing operation as soon as the light barrier senses the insertion of fabric.

#### Prerequisites for the operation:

- Parameter 009 = ON (light barrier On).
- Parameter 129 = ON (automatic start On).
- Parameter 131 = ON (light barrier sensing uncovered).
- Parameter 132 = ON (no start of sewing with light barrier uncovered).
- The pedal must be kept pressed forward at the seam end.

For safety reasons this function is enabled only after a normal start of sewing. The light barrier must be covered as long as the pedal is in position 0 (neutral). Then press the pedal forward. This function is disabled when the pedal is no longer pressed forward after the seam end.

### 9.28.6 Light Barrier Filter for Knitted Fabrics

Function <b>with</b> or <b>without</b> control panel	Parameter
Number of stitches of the light barrier filter (LSF)	<b>005</b>
Light barrier filter On/Off (LSF)	<b>130</b>
Light barrier sensing uncovered or covered (LSd)	<b>131</b>

The filter prevents premature enabling of the light barrier function when sewing knitted fabrics.

- Enabling/Disabling of the filter by means of parameter 130
- The filter is not active if parameter 005 = 0
- Adaptation to the mesh is possible by varying the number of filter stitches.
- Knitted fabric sensing with light barrier uncovered → covered, if parameter 131 = OFF  
Knitted fabric sensing with light barrier covered → uncovered, of parameter 131 = ON

### 9.28.7 Functional Variations of the Light Barrier Input

Function <b>with</b> or <b>without</b> control panel	Parameter
Selection of the input function on socket B18/5	<b>239</b>

If the light barrier function is not used, a switching function can be assigned to the input on socket B18/5 as well as to inputs in1...i10.

**The following input functions are possible with parameter 239:**

**Parameter 239 = 0**      **Light barrier function:** The input is prepared for a light barrier function.

**Parameter 239 = 1...44**      **All other input functions are identical with those described for parameter 240 below.**

### 9.29 Switching Functions of Inputs in1...i10

Function <b>with</b> or <b>without</b> control panel	Parameter
Selection of the input function (in1...i10)	<b>240...249</b>

A variety of functions can be selected for each input on sockets ST2 and B4.

**The following input functions are possible with parameters 240...249:**

- 240 = 0**      **Input function blocked**
- 240 = 1**      **Needle up/down:** Upon pressing the key, the drive runs from position 1 to position 2 or from position 2 to position 1. If the drive is not in the stop position, it runs to the preselected basic position.
- 240 = 2**      **Needle up:** Upon pressing the key, the drive runs from position 1 to position 2.
- 240 = 3**      **Single stitch (basting stitch):** Upon pressing the key, the drive performs one rotation from position 1 to position 1. If the drive is in position 2, it runs to position 1 upon pressing the key and from position 1 to position 1 each time the key is pressed again.
- 240 = 4**      **Full stitch:** Upon pressing the key, the drive performs a full rotation depending on the set stop position.
- 240 = 5**      **Needle to position 2:** If the drive is not in position 2, it runs to position 2 upon pressing the key.
- 240 = 6**      **Machine run blockage effective with open contact:** Upon opening the switch, the drive stops in the preselected basic position.
- 240 = 7**      **Machine run blockage effective with closed contact:** Upon closing the switch, the drive stops in the preselected basic position.
- 240 = 8**      **Machine run blockage effective with open contact (unpositioned):** Upon opening the switch, the drive stops immediately unpositioned.
- 240 = 9**      **Machine run blockage effective with closed contact (unpositioned):** Upon closing the switch, the drive stops immediately unpositioned.
- 240 = 10**      **Run at automatic speed (n12):** Upon pressing the key, the drive runs at automatic speed. The pedal is not used. (This input function is inverted in mode 9.)
- 240 = 11**      **Run at limited speed (n12):** Upon pressing the key, the drive runs at limited speed. The pedal must be pressed forward.
- 240 = 12**      **Sewing foot lifting with pedal in position 0 (neutral)**

240 = 13	<b>High lift for walking foot operational mode not stored:</b> The signal “high lift for walking foot” is issued as long as the key is pressed down, and the drive runs with speed limitation (n10).
240 = 14	<b>High lift for walking foot operational mode stored /flip-flop 1:</b> The signal “high lift for walking foot” is issued upon briefly pressing the key, and the drive runs with speed limitation (n10). The operation is disabled upon pressing the key again.
240 = 15	<b>Tape cutter or fast scissors (mode 6/7):</b> Upon pressing the key, the tape cutter will be enabled for a preset time.
240 = 16	<b>Intermediate backtack / Intermediate stitch condensing:</b> Upon pressing the key, the backtack or stitch condensing will be enabled anywhere in the seam and at standstill of the drive.
240 = 17	<b>Stitch regulator suppression / recall:</b> Upon pressing the key, the backtack or stitch condensing operation will be suppressed or recalled once.
240 = 18	<b>Unlocking the chain:</b> Upon pressing the key, the motor performs a reverse rotation at the seam end. Moreover, backtacking and thread trimmer will be suppressed.
240 = 19	<b>Reset bobbin thread monitor:</b> After inserting a full bobbin, the stitch counter is set to the value determined by means of parameter 031.
240 = 20	<b>Positioning speed n1</b>
240 = 21	<b>No function</b>
240 = 22	<b>Speed limitation n11 (flip-flop 2):</b> Upon pressing the key in the seam, the speed limitation n11 is enabled, and a signal is issued at the output ST2/29. The speed limitation will be disabled upon pressing the key again, and the signal at the output is no longer issued.
240 = 23	<b>Speed limitation n9</b>
240 = 24	<b>Needle moves from position 1 to position 2:</b> After the 1 <sup>st</sup> actuation: machine run from position 1 to position 2 and subsequent sewing foot lift. The start is blocked. If the needle is not in position 1, the start is blocked for safety reasons, and the sewing foot is immediately lifted. After the 2 <sup>nd</sup> actuation the sewing foot lowers and machine run is enabled.
240 = 25	<b>Speed limitation with external potentiometer:</b> Upon pressing the key, the external speed limitation becomes effective. Parameter 126 must be set at “2”.
240 = 26	<b>No function</b>
240 = 27	<b>Unlocking the chain:</b> Upon pressing the key, the function “unlock the chain” will be performed without using the pedal.
240 = 28	<b>External light barrier:</b> In this mode it is possible to initiate the seam end by means of a key, not by means of the light barrier. But the light barrier function must be On.
240 = 29	<b>Hemmer foot signal off:</b> See parameter 296.
240 = 30	<b>High lift for walking foot:</b> Upon pressing the key, high lift for walking foot is enabled if the sewing foot is On.
240 = 31	<b>Function “speed limitation bit0”:</b> Upon pressing the bit0 key, speed n11 will be enabled. Upon simultaneously pressing the bit0 and bit1 keys, speed n9 will be enabled.
240 = 32	<b>Function “speed limitation bit1”:</b> Upon pressing the bit1 key, speed n10 will be enabled. Upon simultaneously pressing the bit0 and bit1 keys, speed n9 will be enabled.
240 = 33	<b>Speed n9:</b> Below this speed operation can be pedal controlled.
240 = 34	<b>Automatic speed n9:</b> The speed can be suspended by pressing the pedal to position 0.
240 = 35	<b>Automatic speed n9:</b> The speed can be interrupted by pressing the pedal to position -2.
240 = 36	<b>Automatic speed n9:</b> No influence by the pedal.
240 = 37...42	<b>No function</b>
240 = 43	<b>Needle up with subsequent sewing foot lift the pedal being in pos. 0 (neutral)</b>
240 = 44	<b>Seam end as with pedal in pos. -2 ( only with program 1466!)</b>

**Input functions of parameters 241...249 are identical with those described for parameter 240.**

### 9.30 Software Debouncing of All Inputs (Only< with Program 1466)

Functions	Parameter
Software debouncing of all inputs (EnP)	<b>238</b>

**Parameter 238 = 0** No debouncing

**Parameter 238 = 1** Debouncing

### 9.31 F1/F2 Function Key Assignment on the V810/V820 Control Panels

Functions		Parameter
Selection of input function on the (A) key "F1" on the V810/V820 control panels	(tF1)	<b>293</b>
Selection of input function on the (B) key "F2" on the V810/V820 control panels	(tF2)	<b>294</b>

The following functions are possible using parameters **293** and **294**:

- 293/294 = 0**                    **Input function blocked**
- 293/294 = 1**                    **Needle up/down:** Upon pressing the key, the drive runs from position 1 to position 2 or from position 2 to position 1. If the drive is not in the stop position, it runs to the preselected basic position.
- 293/294 = 2**                    **Needle up:** Upon pressing the key, the drive runs from position 1 to position 2.
- 293/294 = 3**                    **Single stitch (basting stitch):** Upon pressing the key, the drive performs one rotation from position 1 to position 1. If the drive is in position 2, it runs to position 1 upon pressing the key and from position 1 to position 1 each time the key is pressed again.
- 293/294 = 4**                    **Full stitch:** Upon pressing the key, the drive performs a full rotation depending on the stop position.
- 293/294 = 5**                    **Needle to position 2:** If the drive is not in position 2, it runs to position 2 upon pressing the key.
- 293/294 = 6...12**                **No function**
- 293/294 = 13**                   **High lift for walking foot operational mode not stored:** The signal "high lift for walking foot" is issued as long as the key is pressed down, and the drive runs with speed limitation (n10).
- 293/294 = 14**                   **High lift for walking foot operational mode stored /flip-flop 1:** The signal "high lift for walking foot" is issued upon briefly pressing the key, and the drive runs with speed limitation (n10). The operation is disabled upon pressing the key again.
- 293/294 = 15**                   **Tape cutter or fast scissors (mode 6/7):** Upon pressing the key, the tape cutter will be enabled for a preset time.
- 293/294 = 16**                   **Intermediate backtack:** Upon pressing the key, the backtack will be enabled anywhere in the seam and at standstill of the drive.
- 293/294 = 17**                   **Backtack suppression / recall:** Upon pressing the key, the backtack will be suppressed or recalled once.
- 293/294 = 18**                   **Unlocking the chain:** (Can be activated by keystroke, but will be executed only at the seam end.)
- 293/294 = 19**                   **Reset bobbin thread monitor:** After inserting a full bobbin, the stitch counter is set to the value determined by means of parameter 031.
- 293/294 = 20/21**                **Positioning speed n1**
- 293/294 = 22**                   **Speed limitation n11 (flip-flop 2):** Upon pressing the key in the seam, the speed limitation n11 is enabled, and a signal is issued at the output ST2/29. The speed limitation will be disabled upon pressing the key again, and the signal at the output is no longer issued.
- 293/294 = 23**                   **Speed limitation n9**
- 293/294 = 24**                   **Needle moves from position 1 to position 2 (flip-flop 2):** If the needle is not in position 1, the start is blocked for safety reasons, and the sewing foot is immediately lifted.
- 293/294 = 25**                   **Speed limitation with external potentiometer:** Upon pressing the key, the external speed limitation becomes effective. Parameter 126 must be set at "2".
- 293/294 = 26**                   **No function**
- 293/294 = 27**                   **Unlocking the chain:** Upon pressing the key, the function "unlock the chain" will be performed without using the pedal.
- 293/294 = 28**                   **No function**

### 9.32 Speed Limitation by means of External Potentiometer

Function <b>with</b> or <b>without</b> control panel		Parameter
Speed limitation by means of external potentiometer (maximum value)	(toP)	<b>124</b>
Speed limitation by means of external potentiometer (minimum value)	(bot)	<b>125</b>
Function "speed limitation with external potentiometer"	(Pot)	<b>126</b>

A speed limitation can be set by means of external potentiometer using parameters 124 and 125. The external potentiometer can be connected to sockets ST2/2, ST2/3 and ST2/4.

**Parameter 124:** Maximum value for speed limitation with external potentiometer

**Parameter 125:** Minimum value for speed limitation with external potentiometer

The following functions for speed limitation are possible by means of external potentiometer using parameter 126:

**Parameter 126 = 0** Function "external potentiometer" Off.

**Parameter 126 = 1** The external potentiometer is active whenever the pedal is pressed forward. The drive always runs with the set speed limitation.

**Parameter 126 = 2** The external potentiometer is active only if an input is set at "25" by means of parameters 240...249. If the selected input is enabled and the pedal pressed forward, the drive runs at limited speed. The speed limitation can be enabled and disabled anywhere in the seam by means of the key.

### 9.33 Signal "Machine Running"

Function <b>with</b> or <b>without</b> control panel		Parameter
Mode "machine running"	(LSG)	<b>155</b>
Switch-off delay for signal "machine running"	(t05)	<b>156</b>

**Parameter 155 = 0** Signal "machine running" Off.

**Parameter 155 = 1** Signal "machine running" will be issued whenever the drive is running.

**Parameter 155 = 2** Signal "machine running" will be issued whenever the speed is higher than 3000 RPM.

**Parameter 155 = 3** Signal "machine running" will be issued whenever the pedal is not in position 0 (neutral).

The signal switch-off time can be delayed by means of parameter 156.

### 9.34 Function "Error Message A1" On/Off

Function <b>with</b> or <b>without</b> control panel		Parameter
Error message A1 On/Off	(PA1)	<b>233</b>

Error message A1 can be disabled by means of parameter 233 if the pedal is not in position 0 (neutral) when switching the machine on.

**Parameter 233 = OFF** Error message A1 is suppressed. Then normal function (e. g. with automats).

**Parameter 233 = ON** Error message A1 is displayed. No function is possible.

### 9.35 Signal Output Position 1

- Transistor output with open collector
- Signal whenever the needle is in the slot between position 1 and 1A
- Independent of sewing, thus also when turning the handwheel manually
- Suitable e. g. for the connection of a counter
- An inverted signal is issued at socket ST2/20

### 9.36 Signal Output Position 2

- Transistor output with open collector
- Signal whenever the needle is in the slot between position 2 and 2A
- Independent of sewing, thus also when turning the handwheel manually
- Suitable e. g. for the connection of a counter
- An inverted signal is issued at socket ST2/21

### 9.37 Signal Output 120 Impulses per Rotation


- Transistor output with open collector
- Signal whenever a generator slot of the position transmitter is sensed
- 120 impulses per rotation of the handwheel
- Independent of sewing, thus also when turning the handwheel manually
- Suitable e. g. for the connection of a counter
- An inverted signal is issued at socket ST2/22

9.38 Actuator

The commands for the sewing operation are input by means of the actuator, which is connected to the pedal. Instead of the built-on actuator another actuator can also be connected to socket B80.

Table: Coding of the Pedal Steps

Pedal step	D	C	B	A		
-2	H	H	L	L	Full heelback	(e. g. initiating the seam end)
-1	H	H	H	L	Slight heelback	(e. g. sewing foot lifting)
0	H	H	H	H	Pedal in pos. 0 (neutral)	
½	H	H	L	H	Pedal slightly forward	(e. g. sewing foot lowering)
1	H	L	L	H	Speed stage 1	(n1)
2	H	L	L	L	Speed stage 2	
3	H	L	H	L	Speed stage 3	
4	H	L	H	H	Speed stage 4	
5	L	L	H	H	Speed stage 5	
6	L	L	H	L	Speed stage 6	
7	L	L	L	L	Speed stage 7	
8	L	L	L	H	Speed stage 8	
9	L	H	L	H	Speed stage 9	
10	L	H	L	L	Speed stage 10	
11	L	H	H	L	Speed stage 11	
12	L	H	H	H	Speed stage 12	(n2) Pedal fully forward

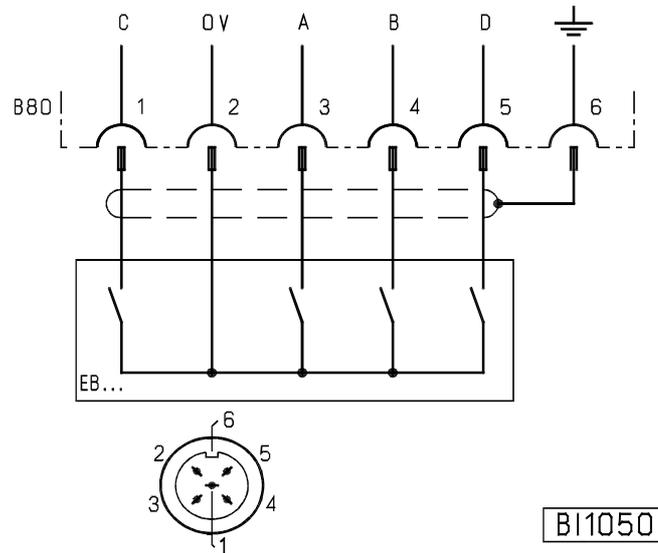

EB.. Actuator

Function <b>with</b> or <b>without</b> control panel	Parameter
Selectable pedal functions	(-Pd) <b>019</b>

- Parameter 019 = 0** Pedal in pos. -1 blocked in the seam. But with pedal in pos. -2 sewing foot lifting is possible in the seam. (This function is possible only if the light barrier is On).
- Parameter 019 = 1** With pedal in pos. -1 sewing foot lifting is blocked in the seam.
- Parameter 019 = 2** With pedal in pos. -2 thread trimming is blocked. (This function is possible only if the light barrier is On).
- Parameter 019 = 3** With pedal in pos. -1 and -2 all functions are enabled.
- Parameter 019 = 4** Pedal in pos. -1 and -2 is blocked in the seam. (Function only if parameter 009 = 1).

Function <b>with</b> or <b>without</b> control panel	Parameter
Speed stage graduation	(nSt) <b>119</b>

The pedal characteristics (speed change from stage to stage) can be varied.

Possible characteristic curves:

- linear
- progressive
- highly progressive

### 9.39 Acoustic Signal

Function <b>with</b> control panel	Parameter
Acoustic signal On/Off (AkS)	<b>127</b>

An acoustic signal which sounds in the following cases can be enabled by means of parameter 127:

- When the bobbin thread monitor is On, after completion of the stitch count.
- When the machine run blockage is On.

### 9.40 Master Reset

#### Recovery of factory settings.

- Press the "**P**" key and turn power on
- Input code number "**190**"
- Press the "**E**" key
- Parameter 100 appears on the display
- Press the "**E**" key
- The parameter value is shown on the display
- Set to "**170**" by means of the "+" key
- Press the "**P**" key twice
- Turn power off
- Turn power on. All parameters have been reset to their factory settings.

## 10 Signal Test

Function <b>with</b> or <b>without</b> control panel	Parameter
Input and output test (Sr4)	<b>173</b>

Function test of external inputs and transistor power outputs with connected actuators (e.g. solenoids and solenoid valves).

### 10.1 Signal Test Using the Incorporated Control Panel or the V810/V820

#### Output test:

- Select parameter 173
- Select the desired output by means of the +/- keys
- Enable the selected output by means of the >> key on the V810 or the incorporated control panel
- Enable the selected output by means of the **B** key (bottom right) on the V820

Display	Assignment of the outputs
<b>ON/OFF</b>	Input test
<b>01</b>	Backtacking on socket ST2/34
<b>02</b>	Sewing foot lift on socket ST2/35
<b>03</b>	Output M1 on socket ST2/37
<b>04</b>	Output M3 on socket ST2/27
<b>05</b>	Output M2 on socket ST2/28
<b>06</b>	Output M4 on socket ST2/36
<b>07</b>	Output M5 on socket ST2/32
<b>08</b>	Output M11 on socket ST2/31
<b>09</b>	Output M6 on socket ST2/30
<b>10</b>	Output M9 on socket ST2/25
<b>11</b>	Output M8 on socket ST2/24
<b>12</b>	Output M7 on socket ST2/23
<b>13</b>	Output M10 on socket ST2/29

#### Input test:

- Press the – key several times until "OFF" or "ON" appears on the control display.
- Actuation of external switches is displayed by the switching state ON/OFF.
- Several switches must not be closed at the same time.

The letter symbols in parentheses ( ) are visible only if the V820 control panel is connected!

## 11 Error Displays


<b>General Information</b>			
<b>On the control</b>	<b>On the V810</b>	<b>On the V820</b>	<b>Signification</b>
A1	InF A1	InFo A1	Pedal not in neutral position, when turning the machine on (according to setting of parameter 233)
A2	-StoP- blinking + symbol display	-StoP- blinking + symbol display	Machine run blockage
A6	InF A6	InFo A6	Light barrier monitoring
A7	Symbol blinking	Symbol blinking	Bobbin thread monitor

<b>Programming Functions and Values (Parameters)</b>			
<b>On the control</b>	<b>On the V810</b>	<b>On the V820</b>	<b>Signification</b>
Returns to 000 or to last parameter number	Returns to 0000 or to last parameter number	Like V810 + display InFo F1	Wrong code number or parameter number input

<b>Serious Condition</b>			
<b>On the control</b>	<b>On the V810</b>	<b>On the V820</b>	<b>Signification</b>
E1	InF E1	InFo E1	After power On, position transmitter or commutation transmitter defective, or connecting cables have been changed by mistake. During operation or after a sewing cycle, only position transmitter defects can be identified.
E2	InF E2	InFo E2	Line voltage too low, or time between power off and power on too short.
E3	InF E3	InFo E3	Machine blocked or does not reach the desired speed.
E4	InF E4	InFo E4	Control disturbed by deficient grounding or loose contact.

<b>Hardware Disturbance</b>			
<b>On the control</b>	<b>On the V810</b>	<b>On the V820</b>	<b>Signification</b>
H1	InF H1	InFo H1	Commutation transmitter cord or frequency converter disturbed.
H2	InF H2	InFo H2	Processor disturbed

## 12 Operating Elements of the V810 Control Panel

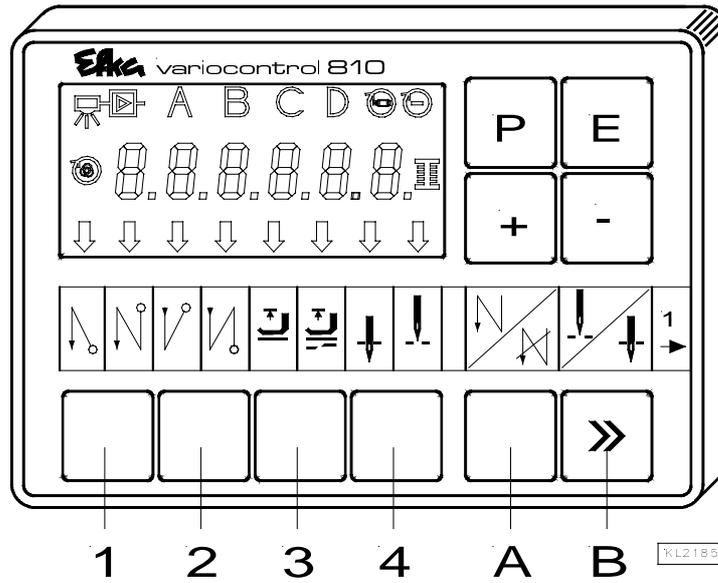

The V810 control panel is supplied with the **no. 1** slide-in strip above the keys. For different functions the strip can be replaced with another one supplied with the control panel. Set parameter **291** in this case. See also **V810 / V820** instruction manual!

### Function Assignment to the Keys

P key = Call or exit of programming mode

E key = Enter key for modifications in the programming mode

+ key = Increase of the value indicated in the programming mode

- key = Decrease of the value indicated in the programming mode

1 key = Start backtack SINGLE / DOUBLE / OFF

2 key = End backtack SINGLE / DOUBLE / OFF

3 key = Automatic sewing foot lift after thread trimming ON / OFF  
Automatic sewing foot lift at stop in the seam ON / OFF

4 key = Basic position needle down (POSITION 1) / needle up (POSITION 2)


A key = Key for intermediate backtack

(Different input functions can be assigned to the A key using parameter 293)

B key = Key for needle up/down or shift key in the programming mode

(Different input functions can be assigned to the B key using parameter 294)

## 13 Operating Elements of the V820 Control Panel

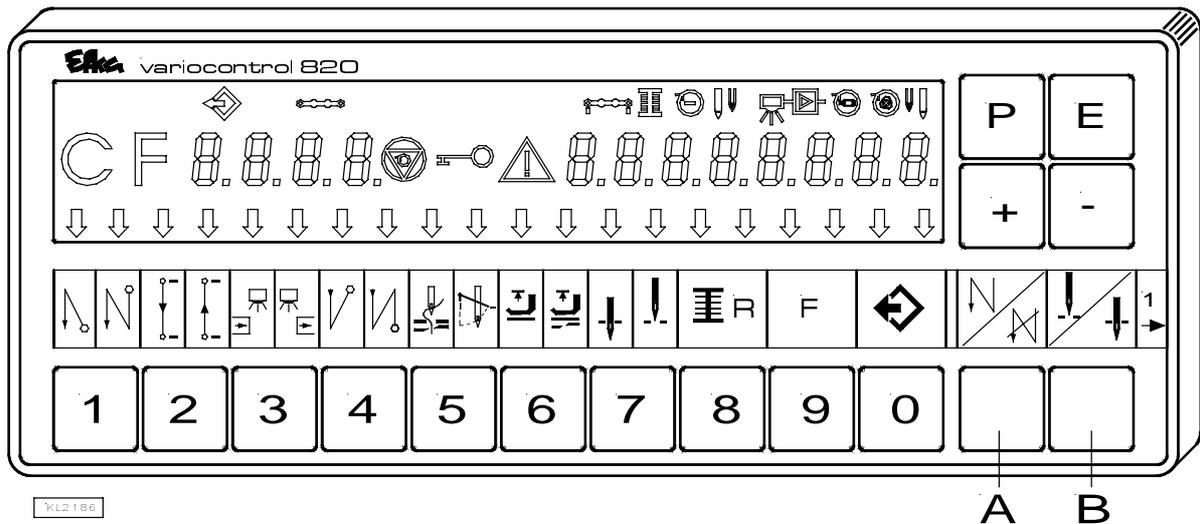

The V820 control panel is supplied with the **no. 1** slide-in strip above the keys. For different functions the strip can be replaced with another one supplied with the control panel. Set parameter **292** in this case. See also **V810 / V820** instruction manual!

### Function Assignment to the Keys

- P key = Call or exit of programming mode
- E key = Enter key for modifications in the programming mode
- + key = Increase of the value indicated in the programming mode
- key = Decrease of the value indicated in the programming mode
- 1 key = Start backtack SINGLE / DOUBLE / OFF
- 2 key = Stitch counting seam FORWARD / BACKWARD / OFF
- 3 key = Light barrier function COVERED-UNCOVERED / UNCOVERED-COVERED / OFF
- 4 key = End backtack SINGLE / DOUBLE / OFF
- 5 key = THREAD TRIMMER / THREAD TRIMMER + THREAD WIPER / OFF
- 6 key = Automatic sewing foot lift after thread trimming ON / OFF  
Automatic sewing foot lift at stop in the seam ON / OFF
- 7 key = Basic position needle down (POSITION 1) / needle up (POSITION 2)
- 8 key = Bobbin thread monitor ON / OFF
- 9 key = Function key - programmable
- 0 key = Teach-in / execution of 40 possible seam sections
  
- A key = Key for backtack suppression/recall  
(Different input functions can be assigned to the A key using parameter 293)
- B key = Key for needle up/down or shift key in the programming mode  
(Different input functions can be assigned to the B key using parameter 294)

### Special Key Assignment for HIT

After having pressed the 1, 2, 3, 4 or 9 key, the following can be varied by means of the +/- keys:

- 1 key = Number of stitches of the selected start backtack
- 2 key = Number of stitches of the seam with stitch counting
- 3 key = Number of light barrier compensating stitches
- 4 key = Number of stitches of the selected end backtack
- 9 key = Number of stitches or On/Off of the programmed function



**FRANKL & KIRCHNER GMBH & CO KG**  
SCHEFFELSTRASSE 73 – D-68723 SCHWETZINGEN  
TEL.: +49-06202-2020 – TELEFAX: +49-06202-202115  
email: [info@efka.net](mailto:info@efka.net) – <http://www.efka.net>



**OF AMERICA INC.**  
3715 NORTHCREST ROAD – SUITE 10 – ATLANTA – GEORGIA 30340  
PHONE: (770) 457-7006 – TELEFAX: (770) 458-3899 – email: [efkaus@aol.com](mailto:efkaus@aol.com)



**ELECTRONIC MOTORS SINGAPORE PTE. LTD.**  
67, AYER RAJAH CRESCENT 05-03 – SINGAPORE 139950  
PHONE: +65-67772459 – TELEFAX: +65-67771048 – email: [efkaems@cyberway.com.sg](mailto:efkaems@cyberway.com.sg)